 


# Contents

---

<b>Safety Information</b> . . . . .	7
<b>Overview</b> . . . . .	13
Guide Overview . . . . .	14
Phone Overview . . . . .	15
Indicators . . . . .	18
Accessories . . . . .	21
<b>Getting Started</b> . . . . .	25
Attaching the Satellite Antenna . . . . .	26
What Is a SIM Card? . . . . .	27
Installing/Removing the SIM Card . . . . .	28
Installing the Battery . . . . .	30
Removing the Battery . . . . .	31
Charging the Battery . . . . .	33
Checking Battery Charge Level . . . . .	35
Battery Information . . . . .	36
<b>Using Your Phone</b> . . . . .	37
Startup Procedures . . . . .	38
Placing a Call . . . . .	42
Receiving a Call . . . . .	45
Additional Phone Features . . . . .	48
<b>Using In-Call Features</b> . . . . .	51
Muting a Call . . . . .	52
<b>Using the Menus</b> . . . . .	53
Using the Options Menu . . . . .	54
Using the Quick Access Menu . . . . .	56
<b>Managing the Phone Book</b> . . . . .	59
Phone Book Menu . . . . .	60
Organizing Your Phone Book . . . . .	61
Storing Names and Numbers . . . . .	63
Entering Names . . . . .	65
Using Pauses in Numbers . . . . .	67
Using Phone Number Prefixes . . . . .	69
Locating Entries . . . . .	70
Calling, Modifying, or Erasing an Entry . . . . .	72
Checking Phone Book Capacity . . . . .	73

Preventing Access to the Phone Book . . . . .	74
Restricting Phone Use . . . . .	75
Viewing the Last Ten Calls Made or Received .	80
Viewing and Modifying Your Phone Numbers .	81
Using One-Touch Dialing . . . . .	83
Viewing Service Phone Numbers . . . . .	85
<b>Using Calling Features . . . . .</b>	<b>87</b>
Call Related Features Menu . . . . .	88
Forwarding Calls When Unavailable . . . . .	89
Forwarding All Your Calls . . . . .	90
Using Detailed Call Forwarding . . . . .	92
Canceling All Forwarding . . . . .	94
Restricting Calls with Call Barring . . . . .	95
Viewing the Battery Meter . . . . .	100
Viewing Signal Strength . . . . .	101
Deactivating Pending Call Drop Signal . . . . .	102
<b>Using Message Services . . . . .</b>	<b>103</b>
Messages Menu . . . . .	104
Checking Your Voicemail . . . . .	105
Managing Your Received Messages . . . . .	106
Accessing Received Messages . . . . .	108
Managing Outgoing Messages . . . . .	113
Managing Other Message Settings . . . . .	122
<b>Customizing Phone Features . . . . .</b>	<b>127</b>
Phone Setup Menu . . . . .	128
Managing Phone Ringer Settings . . . . .	129
Locking and Unlocking Your Phone . . . . .	131
Protecting the SIM Card . . . . .	133
Managing Other Security Settings . . . . .	135
Activating Extended Menus . . . . .	137
Managing Time and Date Settings . . . . .	138
Selecting the Display Language . . . . .	141
Turning Lights On and Off . . . . .	142
Setting Keypad Tones . . . . .	142
Managing Phone Settings . . . . .	143
<b>Accessing the Network . . . . .</b>	<b>147</b>
Network Selection Menu . . . . .	148



Registering With the Satellite Network .....149

**Timing Your Calls** .....151

    Call Meters Menu .....152

    Showing Call Timers .....153

    Setting Audible Call Timers .....155

    Showing the In-Call Timer .....157

    Showing the Lifetime Timer .....158

**Customizing the Menu System** .....159

    Personalizing the Options Menu .....160

    Personalizing the Quick Access Menu .....162

 
 
 
 
**Troubleshooting** .....163


 

 
 


**Index** ..... 167

**Patent Information** .....179

**Declaration of Conformity** .....180

**Warranty Information** .....181



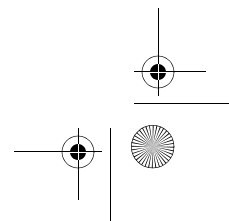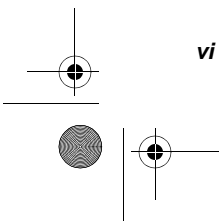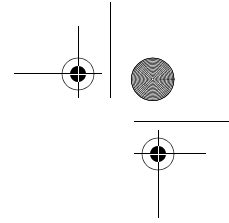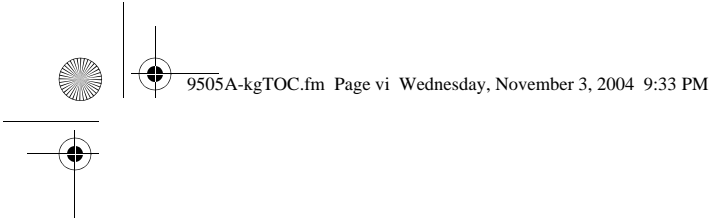

## ***Safety Information***

---

**Important:** Read this information before using your satellite phone.

### ***Exposure to Radio Frequency Signals***

 
Your satellite telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

International agencies have set standards and recommendations for the protection of public exposure to RF electromagnetic energy.

- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Verband Deutscher Elektrotechniker (VDE) DIN-0848
- United States Federal Commission, Radio Frequency Exposure Guidelines (1996)
- National Radiological Protection Board of the United Kingdom, GS 11, 1988
- American National Standards Institute (ANSI) IEEE. C95. 1-1992
- National Council on Radiation Protection and Measurements (NCRP). Report 86
- Department of Health and Welfare Canada. Safety Code 6

These standards are based on extensive scientific review. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the updated ANSI standard.

The design of your phone complies with these standards when used as described under "Phone Operation" on page 9.



## ***Specific Absorption Rate Data***

**This model phone meets international standards for exposure to radio waves.**

 
 
 
 
Your satellite phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. The guidelines are based on standards that we developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for this model, the SAR limit is 2.0 W/kg. \*Tests for SAR were conducted in accordance with CENELEC and FCC testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body. The highest SAR level recorded from this product was 0.357 mW/g for a 1g cube which was below the uncontrolled (i.e. general population) limit. While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that modifications to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

## ***Antenna Care***

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate local agency regulations. When using remote mount antenna, mount antenna at least 20 cm away from the user.



## ***Phone Operation***

**Normal Operation:** Hold the phone as you would any other telephone. Rotate the antenna to either the left or right detent, and make sure the antenna is fully extended. The antenna should be vertical to the ground and have a clear unobstructed view of the sky.

**Tips on Efficient Operation:** For your phone to operate most efficiently:

- Rotate and extend your antenna fully.
- Make sure the antenna has a clear unobstructed view of the sky.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.
- Do not wear the phone on your body while making calls with the headset accessory. Wearing the phone on the body can interfere with proper phone operation, since the antenna requires a clear unobstructed view of the sky to access the Iridium<sup>®</sup> satellite network.

## ***Batteries***

**Caution:** All batteries can cause property damage, injury or burns if a conductive material, such as jewelry, keys or beaded chains, touches exposed terminals. The material may complete an electrical circuit and become quite hot. To protect against such unwanted current drain, exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. **Caution:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to instructions.

## ***Driving***

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Observe the following guidelines when using your phone while driving.

- Give full attention to driving—driving safely is your first responsibility.
- Use hands-free phone operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## ***Electronic Devices***

Most modern electronic equipment is shielded from RF signals. However, certain equipment may not be shielded against the RF signals from your wireless phone.

### ***Pacemakers***

The Health Industry Manufacturers Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON
- should not carry the phone in a breast pocket
- should use the ear opposite the pacemaker to minimize the potential for interference
- should turn the phone OFF immediately if you have any reason to suspect that interference is taking place

### ***Hearing Aids***

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### ***Other Medical Devices***

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### ***Vehicles***

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.



### ***Posted Facilities***

Turn your phone OFF in any facility where posted notices so require.

### ***Aircraft***

Airline regulations prohibit using your phone while in the air. Check and comply with the policy of your airline regarding the use of your phone while the aircraft is on the ground.

Switch OFF your phone before boarding an aircraft.

### ***Blasting Areas***

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.


 

 
 


### ***Potentially Explosive Atmospheres***

 
Turn your phone OFF and do not remove your battery when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks from your battery in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include, but are not limited to: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where fuel odors are present (for example, if a gas/propane leak occurs in a car or home); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you normally would be advised to turn off your vehicle engine.

### ***For Vehicles Equipped with an Air Bag***

An air bag inflates with great force. Do NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

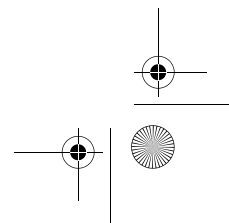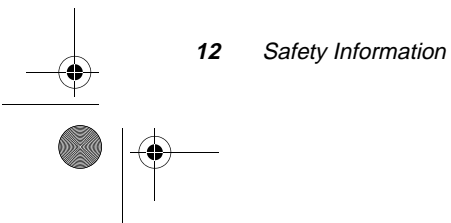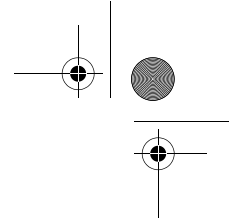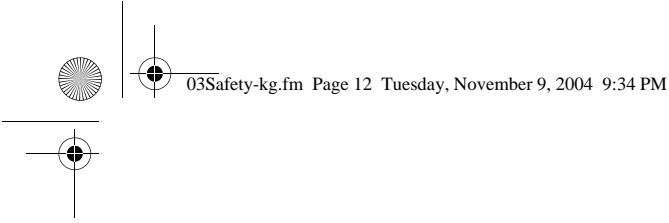







## **Overview**

---

This chapter provides an overview of this user's guide, your new satellite phone, and available accessories.

### ***Export Compliance Information***

    This product is controlled by the export laws and regulations of the United States of America. The U.S. Government may restrict the export or re-export of this product to certain individuals and/or destinations. For further information, contact the U.S. Department of Commerce, Bureau of Industry and Security or visit [www.bis.doc.gov](http://www.bis.doc.gov).






## Guide Overview

### Key Presses

Key presses are represented in this guide using symbols. A sequence of key presses may be shown as follows:



This means you should press  followed by  and then , in sequence, not simultaneously.

### Prompts and Messages

Your phone responds to key presses by displaying either a prompt that guides you to the next action or a message confirming that your action is complete. Prompts and messages are represented in this guide in LCD style, for example: Enter PIN or Completed.

### Tips










In the margins of this guide are useful hints and ways to improve your phone's performance.

## Phone Overview



**Note:** Phone shown with antenna in stowed position.

## Special Keys

Key	Function
	Turns the phone's power on and off
	Selects menu settings or options, or initiates and answers calls
	Takes you directly to the Messages menu, where you can call your voicemail number or read messages you have received
	Stores numbers in the phone book
	Recalls numbers from the phone book
	Enters the Quick Access menu
	Enters the Options menu and scrolls forward through menu features
	Clears characters from the screen or exits the Options menu
	Scrolls backward or forward through menu features

## Volume Control Keys

The volume control keys are located on the left side of the phone. They adjust earpiece and ringer volume. See "Adjust Earpiece Volume" on page 48 and "Adjust Ringer Volume" on page 49 for more information.

## Satellite Antenna

You must rotate and fully extend the satellite antenna to answer calls, make calls, and access satellite services.\* See "Holding the Phone" on page 40 for more information.

\* Satellite products require a clear line of sight to satellite.

### **Satellite Antenna Lock Release Button**

This button releases the satellite antenna so you can attach the auxiliary antenna.

### **Display**

Your phone's Liquid Crystal Display (LCD) displays as many as four rows of 16 characters.

The LCD on your phone may respond slowly to key presses in extremely cold temperatures. This is normal and does not affect the phone operation in any way.

### **Headset Jack**

The headset jack located on the right side of the phone provides a connection for an optional headset.

### **Power Connector**

This connector, located at the bottom left of the phone, provides the connection for an external power supply.

### **Data Connector**

This connector, located on the bottom of the phone, provides the connection for a data cable.

## Indicators



 



### Status Indicator







The status indicator is located at the top of your phone. This LED indicator provides information on your phone's current state of service.

If the LED is...	Then...
Alternating red and green	A call is incoming.
Flashing green	You are receiving a signal from the Iridium satellite network. You can make and receive calls.
Flashing yellow	You are temporarily unable to make or receive calls. Try again in a few minutes.
Flashing yellow and red	Your SIM card may be inserted incorrectly, may not be inserted, or you may be in a restricted area.
Flashing red	Service is not available.



## Display Status Indicators and Icons

Indicator	Description
	<p><b>Signal Strength Indicator</b> indicates the strength of the signal from the network. The signal strength indicator appears continuously in the top left hand corner of the display. The more segments displayed in the bar graph, the stronger the signal. Five bars indicate full signal strength. No bars indicate a weak signal.</p>
	<p><b>Battery Charge Indicator</b> indicates the strength of the battery charge. The more segments displayed, the greater the battery charge.</p> <p>You can also check the strength of the charge at any time through the menu. See "Viewing the Battery Meter" on page 100 for more information.</p>
	<p><b>Real Time Clock Indicator</b> displays the time in either 12-hour or 24-hour format. See "Change the Time Displayed" on page 139 for more information.</p>
	<p><b>Message Indicator</b> appears when you receive a new message. It flashes when the SIM card is full. See "Getting to Received Messages..." on page 109 for additional information.</p>
	<p><b>Satellite Mode Indicator</b> appears when your phone is in satellite mode.</p>
	<p><b>Home System Indicator</b> appears when the phone has successfully registered with the Iridium satellite system.</p>

Indicator	Description
	<b>No Service Indicator</b> appears when your phone is not capable of placing or receiving calls.
	<b>In Use Indicator</b> appears when a call is in progress.
	<b>Scroll Bar</b> appears on the right of the display when you are in a menu. The button on the scroll bar indicates where you are in the list.
	<b>Check Mark</b> indicates a menu item is currently selected.
	<b>Hourglass Icon</b> appears in the display when your phone has to request settings from the network.
	<b>Quick Access Menu Icons</b> allow you to easily identify Quick Access features as you scroll through the Quick Access menu.

## Accessories

Product appearance and specifications are subject to change without notice.

### Batteries

#### Lithium Ion Battery




- Provides up to 3.6 hours of talk time or 30 hours of standby time\*
- Weighs 2.2 ounces/63 grams

\* All talk and standby times are approximate and depend on network configuration, signal strength, and the features selected.

If replacing the battery, the phone should be switched off before removing the battery.

If you want to store the battery for a long period store it in the fully charged state. Batteries that have been stored in a discharged state for longer than 6 months may not be rechargeable.

### ***AC Travel Charger and International Plug Kit***

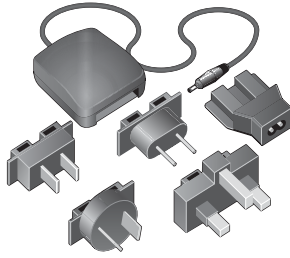

The AC travel charger and international plug kit provides rapid charge for optimal performance and can be used to power the phone except when the battery is fully depleted. The battery must be installed

when using charger to power phone.

- Includes five international plug adapters for use in Europe, United States of America and Canada, United Kingdom, Australia and India.
- Allows you to use the 9505A portable phone while recharging the battery \*

\* The battery should not be allowed to fully discharge.


### ***Auto Accessory Adapter***

Restores full battery power for portable phone operation from any operating vehicle (using standard 12-volt accessory connector port).



### ***Headset***

The convenient headset provides both an earphone and microphone in one small piece for simple hands-free and private telephone conversations. The headset plugs directly into the jack on the right side of your phone.

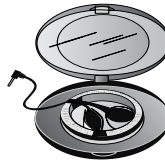


### ***Lanyard Wrist Strap***

The lanyard wrist strap is made of nylon. It provides a convenient way to carry your phone.



### **Portable Auxiliary Antenna**

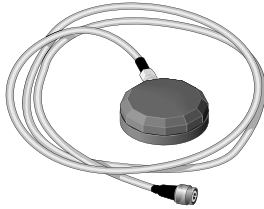

From one car to another, this compact pocket-sized antenna with convenient magnetic mount goes in every vehicle you do, to provide improved reception.

- Reliable magnetic mount, ceramic patch antenna
- Attached 1.5-meter cable

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Ensure antenna is mounted 20 cm feet from user or passengers. Always obey the laws and regulations on the use of these devices.

### **Antenna Adapter**

 


This adapter provides the required external antenna connection to use your 9505A portable phone with the portable auxiliary antenna.

### **Carry Case**







This high-quality leather case helps protect your phone. It includes a belt clip and a lanyard wrist strap.



## ***Getting Started***

---

    Getting started with your new satellite phone is easy. Just insert your phone's SIM (Subscriber Identity Module) card and charge the battery. This chapter shows you how.



## Attaching the Satellite Antenna

### Attach the Antenna

1. **Attach the antenna** in the down position.
2. **Press and hold** the lock release button at the top of the phone.
3. **Push the antenna** until it clicks into place and release the lock release button.



### Remove the Antenna

You may want to remove the satellite antenna to attach an auxiliary antenna.

1. **Place the antenna** in the down position.
2. **Press and hold the lock release button** at the top of the phone.
3. **Remove the antenna** by pulling straight out.





## ***What Is a SIM Card?***

Your SIM (Subscriber Identity Module) card is a small smart card that contains your service details and memory for storing Phone Book entries and messages.

**Note:** Your phone has limited functionality without the SIM card.

### ***SIM Card Protection***


You may want to keep your SIM card in your wallet or purse when you are not using your satellite phone. This helps keep your personal information secure and gives you access to your service even if your phone is not available. If you forget your phone, insert your SIM card into a friend's phone to access your personal service.


**Caution:** Do not bend or scratch your SIM card, and avoid exposing your card to static electricity, water, or dirt.

## Installing/Removing the SIM Card

The SIM card is stored in a recess in the battery compartment. It is normally covered by the battery when you use your phone.

**Caution:** Make sure your phone is powered off before inserting or removing the SIM card. If you don't, you may damage the memory on your SIM card.


1. **Turn your phone off** by pressing and holding the  key.
2. **Remove the battery cover and battery.** (See "Removing the Battery" on page 31.)
3. **Slide the SIM card tray** to the left and **lift up** the right side of the tray.

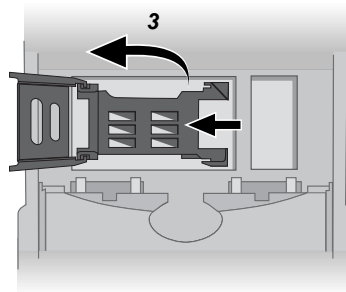


**4. Insert the SIM card into the tray with the notch up and the gold plate facing out.**

**or**

**Remove the SIM card from the tray.**

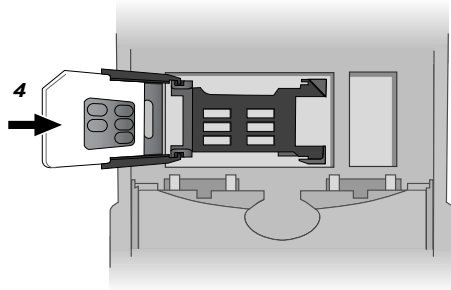

**5. Push down the SIM card tray and slide the tray to the right to lock it in place.**

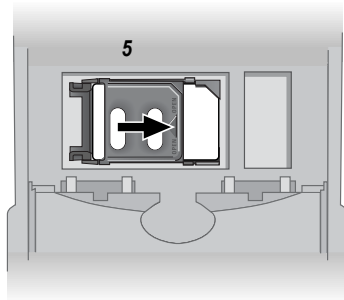

**6. Replace the battery and battery cover.**  
(See "Insert the Battery" on page 30.)


## Installing the Battery

**Tip:** The battery compartment is located on the back of the phone.

### Insert the Battery


1. **Remove or rotate the satellite antenna** before installing the battery. (See "Attaching the Satellite Antenna" on page 26.)

2. **Press and hold the release latch** at the top of the battery compartment cover.

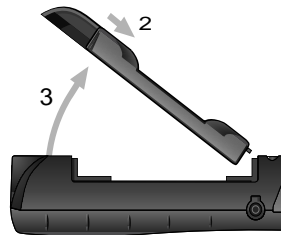


3. **Pull the cover upward**, and then remove it from the phone.

4. Align the arrows on the battery with the arrows in the battery compartment.

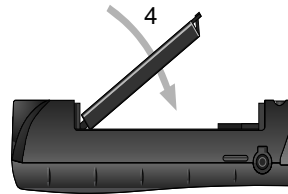

5. **Insert the battery**, bottom end first, into the compartment, and then press the battery downward until it clicks into place.

6. **Insert the bottom end** of the battery compartment cover into the slots at the end of the compartment.

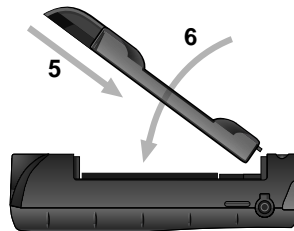


6. **Snap the cover** down into place.

## Removing the Battery


1. Ensure the phone is switched off.
2. Remove or rotate the satellite antenna before removing the battery. (See "Attaching the Satellite Antenna" on page 26.)

3. Press and hold the release latch at the top of the battery compartment cover.

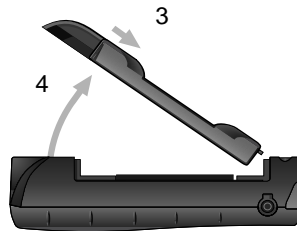


4. Pull the cover upward, and then remove it from the phone.

5. Press and hold the release latch at the base of the battery.

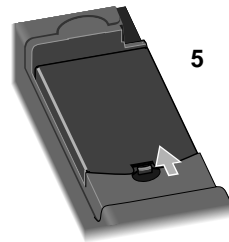


**Tip:** The battery compartment is located on the back of the phone

**6. Pull the battery upward and out of the phone.**

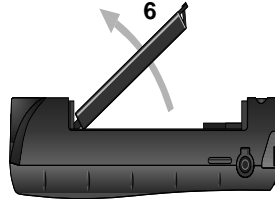

**7. Insert the bottom end of the battery compartment cover into the slots at the end of the compartment.**

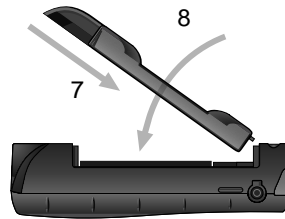

**8. Snap the cover down into place.**

## Charging the Battery

Any battery that hasn't been used for a month or more—including new batteries—should be charged for about 3-4 hours before use.



### Using the Internal Charger

A battery charger is built right into your phone. Using either the travel charger or auto accessory adapter, you can plug the handset directly into a power source to charge the installed battery.

 
**Note:** The battery should only be charged in environments between 0-45°C.

1. **Connect the travel charger** or auto accessory adapter to the phone.




2. **Plug the travel charger** or auto accessory adapter into the appropriate power source. The phone beeps, flashes the  (battery charge) indicator, and displays *Charging Battery*.
3. If the phone is powered on, **press**  to place the phone in charge-only mode.





If the phone is powered off, it automatically enters charge-only mode.



**Note:** You can still place and answer calls while using the internal charger. If you wish to place or answer a call:

**Press**  to exit charge-only mode and return to normal operation.

    Remember that talking on the phone uses power, so charging takes more time.





## Checking Battery Charge Level


### Low Battery Warning

When the battery level is low and only a few minutes of talk-time remains, your phone signals you in two ways:

- Low Battery appears on the display
- A warning tone (two double beeps) sounds

**Note:** To help maintain the best battery and phone performance, recharge your battery as soon as possible after you receive the low battery warning.

### View Battery Meter

The  (battery charge) indicator appears continuously in the upper right corner of the display.

You can also display a more detailed battery meter at any time to check the charge level on your battery. See "Viewing the Battery Meter" on page 100 for more information.

## **Battery Information**

### **Maximizing Battery Life**

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short circuit the battery terminals.

 
**Caution:** At extreme temperatures (eg., -10°C) battery life capacity is significantly reduced.

To ensure maximum battery life and use your battery to its fullest capacity, observe the following guidelines.

- Always use Iridium approved battery chargers
- Always use Iridium approved batteries
- Maintain the battery at or near room temperature when charging
- When you don't plan on using a particular battery for a while, store the battery uncharged in a cool, dark, and dry place
- To prolong the life of your batteries, avoid exposing them to temperatures below -10°C (14°F) or above 45°C (113°F)
- Always take your phone with you when you leave your car

### **Disposing of Batteries**





To dispose of batteries, check with your local recycling center for a battery recycler near you. Never dispose of batteries in fire.



## ***Using Your Phone***


---

    Read this chapter to learn how to get up and running with your new satellite phone.





## Startup Procedures

### Turn the Power On and Off

1. **Insert your SIM card** if necessary. (See "Installing/Removing the SIM Card" on page 28.)
2. **Press and hold**  to turn the phone on and off.

When you turn your phone's power on, you will hear the wakeup tone (or feel a vibration if the vibrate mode is activated) and see the wakeup screen. The wakeup screen displays a short animated sequence that reminds you to rotate and extend the antenna, and shows how to hold the phone for best reception (see illustration). You may see a number of other power-on messages (described on pages 39-40).




When the  (no service) indicator disappears and the  (home system) indicator appears, you are ready to make a call.

## Power-On Messages

Once your phone is powered on, you may see:

Message	Description
Searching...	The phone is attempting to establish communications with the satellite network. See "Accessing the Network" on page 147.
Registering...	Your phone is registering with the network. When the process is complete, you will see <i>Registered</i> . See "Accessing the Network" on page 147.
Check Signal	Your phone is unable to establish registration with the satellite network. Move to a location with a clear unobstructed view of the sky.
Invalid Account	Contact your service provider.
Enter Phone Unlock Code	Your phone was locked after the last use. Enter your four-digit unlock code and press <b>OK</b> to proceed. See "Locking and Unlocking Your Phone" on page 131.
Enter PIN	Enter the four- to eight-digit SIM card PIN code provided by your service provider and press <b>OK</b> to proceed. See "Protecting the SIM Card" on page 133.
Insert Card	Power off your phone, make sure your SIM card is inserted completely, and then power your phone on again.
Check Card	The SIM card is damaged or inserted the wrong way.

Message	Description
Blocked	If the SIM card PIN code is incorrectly entered three times in a row, your phone becomes blocked. See "Unlock the PIN Code" on page 134 for instructions on how to unblock it.
 Blocked	If the SIM card PIN2 code is incorrectly entered three times in a row, some features (e.g., Fixed Dialing) become blocked. See "Unlock the PIN2 Code" on page 136 for instructions on how to unblock PIN2.
Bad Card See Supplier	Your SIM card has been damaged or incorrectly issued. Contact your service provider for information.

### ***Holding the Phone***


1. **Rotate the antenna** to either the left or right detent. The antenna will stop here.



Left Detent

Right Detent

2. **Extend the antenna** by pulling out on the end of it.

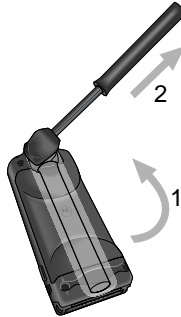

The antenna should be vertical to the ground when you talk on the phone (as shown in the following illustration from the wakeup screen animated sequence).



3. Make sure the antenna has a clear unobstructed view of the sky.

### ***Standby Mode***

To conserve energy, your phone may turn off its display backlight when you have not pressed a key for several seconds. The light reappears the next time you press a key.

## Placing a Call

To place a call, your phone must be powered on, have a SIM card inserted, be unlocked, and be in contact with the satellite network. See "Accessing the Network" on page 147 for network information.

You can enter a phone number up to a maximum of 20 digits. The digits are displayed in two rows, 16 digits in the top line and four digits in the next line.

### Dial a Number

1. **Rotate and fully extend** the satellite antenna. "See Holding the Phone" on page 40.

**Tip:** Press and hold **0+** to get +

**Tip:** If you make a mistake, press **C** once to delete the last digit, or press and hold **C** to clear all digits.

2. **Enter the number** using the digit keys. As you begin entering digits, you will see Call?.

You must enter the phone number in international format:

[international access code, 00, or +]  
[country code] [phone number]

**Note:** If you are calling another Iridium satellite subscriber, dial the subscriber's Iridium number.


3. **Press OK**. You will see Calling followed by the number you dialed.

You will see either the flashing message Calling or the flashing messages Calling, Registering..., and the phone will play a series of setup tones.

If the call connects and is answered, Connected appears on the display for a few seconds, followed by End Call?.




If the call does not connect, you may see one of the following messages:

Message	Description
Busy Try Later or Please Try Later	The phone is unable to access the network. Try again in a few minutes.
Restricted Area	The phone is unable to access the network. Move to an area where calls are allowed.
Redial?	Press  to redial the number automatically. See "Automatic Redial" on page 43 for more information.

### ***Automatic Redial***



If the number or your network is busy, you will see Redial? for five seconds.

Press  to redial the number automatically.

**Note:** Your phone makes a maximum of ten redial attempts. If the call cannot be connected within this maximum, you will see the message Redial Failed.

### ***Redial Last Number Called***

Whenever your phone is on standby, you can redial the last number called:

1. Press  to display the last number dialed.
2. Press  again to place the call.

## Dial Special Characters

You can insert special characters in your numbers:

To enter...	Then...
☎	Press <b>0+</b> .
*	Press <b>*</b> .
† (for international calls)	Press and hold <b>0+</b> .
▣ (for pause dialing)	Press and hold <b>*</b> .
supplementary service numbers, PINs, and unblocking	Press <b>#</b> or <b>*</b> one or more times as necessary.

## Dial a Number With Pauses

See “Using Pauses in Numbers” on page 67 for information on dialing numbers with pauses.

## Dial a Number from the Phone Book

Your phone contains a phone book that you can use to store names and telephone numbers. Once you have stored information in your phone book, you can save dialing steps by:

- using one-touch dialing (page 83)
- recalling and dialing an entry by location (page 71)
- recalling and dialing an entry by name (page 70)
- recalling and dialing one of the last ten numbers called (page 80)

See “Managing the Phone Book” on page 59 for information on how to store and retrieve names and numbers from the phone book.

## **End a Call**

Use one of the following procedures to end a call:

- Press 
- Press 

## **Receiving a Call**

### **Receive a Phone Call**

To receive a call, your phone must be powered on, have a SIM card inserted, be unlocked, and be in contact with the satellite network. See “Accessing the Network” on page 147 for network information.

There are two scenarios for receiving calls depending on the antenna position: (1) antenna raised and fully extended, or (2) antenna stowed or in the down position.

### **Antenna Raised and Fully Extended**

When you receive a call:

- Your phone rings and/or vibrates
- The status indicator alternates red and green
- The phone displays *Call, Answer?* on the next line

To answer the call:

Press  or any digit key (  -  ,  or  ).

You will see *Connected*.

**Tip:** See page 130 to set your phone's alert.

If the call does not connect properly, you may see one of the following messages:

Message	Description
Orient Antenna	You need to fully extend the antenna upwards with a clear unobstructed view of the sky.
Call Failed	The antenna is not properly adjusted or the network signal is not strong enough.

### ***Antenna Stowed or in the Down Position***

When you receive a call:

- The phone chirps up to three times to alert you of an incoming call
- The phone displays *Call Attempt*

You must rotate and extend the antenna as quickly as possible to receive the call.

Rotate and fully extend the antenna as described in "Holding the Phone" on page 40

You will see *Iridium Call Attempt*. Do not attempt to answer until the phone rings or vibrates.

After several seconds, your phone will ring or vibrate and display *Call* followed by *Answer?* on the next line.

To answer the call:

Press **OK** or any digit key (1 - 9<sup>WXYZ</sup>, \* or #).

You will see *Connected*.

If the call does not connect properly, you may see the following message:

Message	Description
Orient Antenna	You need to fully extend the antenna upwards with a clear unobstructed view of the sky.
Call Failed	The antenna is not properly adjusted or the network signal is not strong enough.

### ***End a Call***

Use one of the following procedures to end a call:

- Press 
- Press 

### ***Unanswered Calls***

If you are away from your phone or choose not to answer a call, your phone displays the message *Unanswered Call*.

### ***Personal Mailbox***

Callers who are unable to reach you can leave numeric, text, and voice messages. The next time you register with the satellite network you will receive these messages. Then you will have the option of saving the message for later viewing.

For information on retrieving messages, see “Accessing Received Messages” on page 108.

## Additional Phone Features

### Lock and Unlock the Keypad

To prevent accidental usage of the phone, press the **#** and **\*** keys simultaneously to lock the keypad. All keys with the exception of the **OK** key are disabled. You can still answer an incoming call by pressing **OK** when the keypad is locked.

 
To remove the keypad lock, press **#** and **\*** simultaneously.

### Adjust Earpiece Volume

To adjust earpiece volume:

- **Increase the volume** by pressing the upper volume control key
- **Decrease the volume** by pressing the lower volume control key

As you press the keys, the phone's speaker demonstrates the new volume level. The bar graph in the display represents the volume level. The higher the graph, the louder the volume.



**Note:** You can also use the volume control keys to scroll through Phone Book entries.

**Tip:** The volume control keys are located on the left side of the phone.

## **Adjust Ringer Volume**

To adjust the ringer volume:

Press **↑** and then the up or down volume control key

The phone sounds the new volume level as you adjust it.

**Note:** You can also use the Phone Setup menu to adjust ringer volume. See “Adjust the Ringer Volume” on page 129 for more information.

## **View Your SIM Card Phone Number**


 

 
 


To retrieve and view your phone number from your SIM card:

Press **MR** **#**

 
**Notes:** If you do not see your phone number, the number has not been programmed onto your SIM card. You can program your phone number onto your SIM card by following the steps described in “Modify Your Phone Number(s)” on page 82.

You can also use the Phone Book menu to view your phone number. See “View Your SIM Card Phone Number(s)” on page 81 for more information.

**Tip:** The volume control keys are located on the left side of the phone.

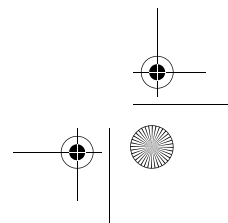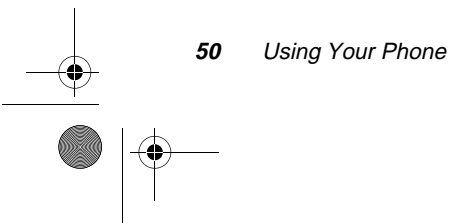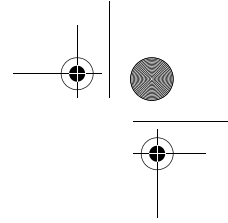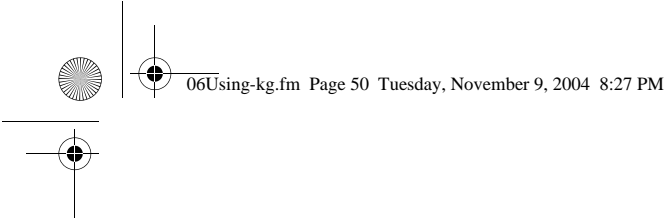


 
 
 
 




## ***Using In-Call Features***

---

Read this chapter to learn how to use In-Call menu features. The In-Call menu is displayed when you press  during a call.





## Muting a Call



**Tip:** You can also mute the phone from the Quick Access menu. See “Using the Quick Access Menu” on page 56.

For privacy during a call, try muting the phone. You hear the party on the other end, but the other party does not hear you.

While in a call:

1. Press  until you see Turn Mute on or off.
2. Press  to select. You will see Mute.

To unmute a call:

1. Press  until you see Turn Mute on or off.
2. Press  to select.



 
 
 
## ***Using the Menus***

---

Many of your phone's features are organized into lists of options called *menus*. There are three menus:

- The main **Options menu** lets you select and/or adjust phone features
- The **Quick Access menu** gives you instant access to the menu features you use most frequently
- The **In-Call menu** gives you access to call-related features when you are in a call

Some options give you access to additional lists of options called *submenus*.









## Using the Options Menu

The Options menu gives you access to your phone's features and options. You can *not* access this menu during a call.




### Navigate the Options Menu

Learning how to use just a few keys enables you to move freely through the entire menu system.







If you want to...	Then...
enter the Options menu	Press  . You will see the first available submenu.
scroll through the Options menu	<ul style="list-style-type: none"> <li>Press  to scroll forward.</li> <li>Press  to scroll backward or forward.</li> </ul>
select options and submenus	Press  to select a menu option or submenu when that option or submenu name is displayed.
exit features and menus	<ul style="list-style-type: none"> <li>Press  to exit the feature or submenu.</li> <li>Press and hold  to exit the Options menu.</li> </ul>

## How the Phone Responds

As you scroll through the Options menu, you will see one of three questions on the bottom line of the display.

If your phone asks...	Then...
View Options?	Press  to enter the submenu.
Select?	Press  to select the displayed feature.
Quit?	Press  to exit the feature.

## Display Messages and Indicators

If you see...	Then...
 Completed	This indicates a feature has been activated.
 Failed	The display returns to the menu in a few seconds.
Enter PIN or Enter Name	Enter requested information, then press  .
 Busy Try Later	You may have requested information while your phone was completing another task.
	The scroll bar indicates where you are in a menu.
	Your phone may take a few seconds to request settings from the network.

## Customize the Options Menu

To personalize the Options menu—to hide and move features—see “Move Menu Features” on page 160.

## Using the Quick Access Menu

The Quick Access menu is a way to keep your favorite menu options readily accessible. Each digit key, **1** to **9**, is matched to a Quick Access feature. See the table on page 57 for the default setup.

If you know the number of the feature, activating that option takes only two button presses! If you do not know the number or want to review your options, just scroll through the icon menu and read the tag attached to each option.

### Activate the Feature Directly

To access the feature directly:

Press **↑**, and then press the digit key of the feature.

### Scroll to the Feature

To scroll to the feature:

1. Press **↑**.
2. Press **MENU** to scroll through the available features.
3. Press **OK** to select a feature.

## Default Quick Access Settings


 

 
 


The following features (and associated icons) are the default settings for the Quick Access menu.

Key	Icon	Quick Access Feature
1		<b>Find Name</b> searches your Phone Book by the full name.
2 ABC		<b>Mute</b> mutes and unmutes a call in progress.
3 DEF		<b>Call Voicemail</b> <sup>1</sup> calls your voicemail number to check your voicemail.
4 GHI		<b>Battery Meter</b> displays a fuel gauge indicating charge. The more bars, the greater the charge.
5 JKL		<b>Lock Now</b> locks your phone immediately.
6 MNOP		<b>Vibrate On/off</b> activates or deactivates the vibrate alert function.
7 PQRS		<b>Read Messages</b> displays the newest message received.
8 TUV		<b>Register Now</b> initiates a search for the Iridium satellite network. You must wait three minutes between registration attempts.
9 WXYZ		<b>Forward On/Off</b> <sup>1</sup> activates or deactivates unconditional call forwarding depending on the current setting.

 
<sup>1</sup> You must subscribe to this network feature through your service provider. Contact your service provider for additional information.

## Customize the Quick Access Menu

See "Personalizing the Quick Access Menu" on page 162 for instructions on how to modify the feature selection on the Quick Access menu.

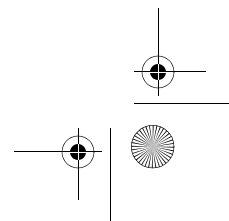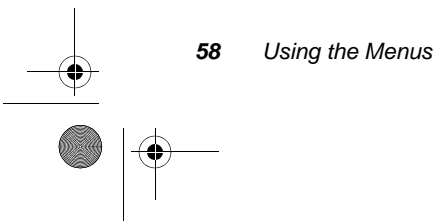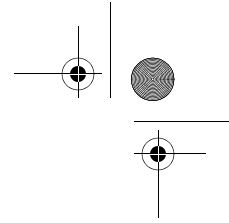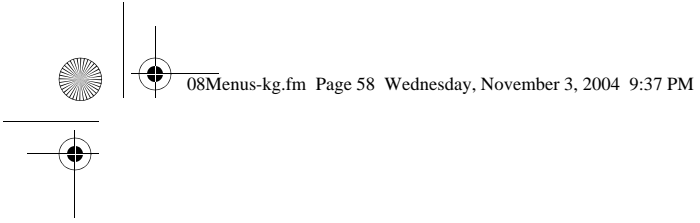









## ***Managing the Phone Book***

---

Your satellite phone can store up to 100 names and numbers, and your SIM card expands memory capacity even more.

    You can use the dedicated keys or the Phone Book menu to add and retrieve numbers from the phone book. With the Phone Book menu you can also access phone book maintenance and security features.



## Phone Book Menu

### Phone Book

- Personal Numbers
  - Find Entry By Name
    - Enter Name:
      - Call Number
      - Modify Name Or Number
      - Erase Name And Number
  - Find Entry By Location
    - Enter Location:
      - Call Number
      - Modify Name Or Number
      - Erase Name And Number
  - Add Entry
    - Add To Phone Memory
    - Add To SIM Card Memory
  - Check Capacity
    - Check Phone Capacity
    - Check SIM Capacity
  - Prevent Access
    - No Memory Restrictions
    - To Phone Memory
    - To SIM Card Memory
    - To Phone & SIM Memory
- Show Services
- Last Ten Calls
  - Last Calls Made
  - Erase All Numbers
- My Phone Number(s)
- Fixed Dialing
  - View Fixed Dial List
  - Setup Fixed Dialing
    - On/Off
    - Edit Entry
    - Add Entry
    - Erase Entry
- One-Touch Dial Setting
  - To Phone Memory
  - To SIM Card Memory
  - To Fixed Dial List

## Organizing Your Phone Book

Each name and phone number in your Phone Book is stored in a numbered memory location. The satellite phone has two types of memory—phone memory and SIM card memory.

	Phone Memory	SIM Card Memory <sup>1</sup>
Personal Numbers	100 entries	155 entries
Fixed Dial Numbers	No entries	40 entries
Phone Number Digits	32	20
Name Characters	16	16
Location Numbers	1-100	101-255

<sup>1</sup> SIM card capacity varies depending upon the card issued by your service provider.

Your phone's memory can seem overwhelming if you do not have a strategy for organizing your Phone Book. Begin setting up your Phone Book by asking yourself three questions:

### ***Which numbers do I call most?***

Make a list of the numbers you call most frequently. You will probably want to store these numbers in the first nine memory locations of your Phone Book. You can then dial them with a single keystroke by using one-touch dialing.

### ***When do I use these numbers?***

Group the numbers on the list according to when you use them. Most people call a different set of numbers during the day than they do in the evening and on weekends. You can switch one-touch dialing to your phone's memory (locations 1–9), your SIM card's memory (locations 101–109), or to your fixed dial list (locations 1–9). Store your evening and weekend numbers on one type of memory and your daytime numbers on another.

### ***Which numbers do I need to keep secure?***

Use your SIM card to store the numbers you need to keep secure, like the numbers of friends and family members. You can remove your SIM card and keep it securely in your wallet or purse when you are not using your phone. If you wish, you can even require a PIN code every time your SIM card is inserted into *any* phone. (To deactivate your PIN code, see "Activate and Deactivate the SIM Card PIN Code" on page 133.) Store more public numbers, like business associates and travel agents in your phone's memory.

**Tip:** *If you have many entries, group them in blocks of ten to make them easier to find.*

## Getting to Personal Numbers...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Personal Numbers, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

## Storing Names and Numbers

### Add an Entry

#### Use the Options Menu

1. Follow the steps in "Getting to Personal Numbers..." to get to Add Entry, and then press **OK**.
2. Press **MENU** to scroll to Add To Phone Memory or Add To SIM Card Memory.
3. Press **OK** to select. You will see Enter Number.
4. Enter a number, and then press **OK**. You will see Enter Name.
5. Enter a name (as described in "Entering Names" on page 65), and then press **OK**. You will see Enter Location.
6. Enter a one-, two-, or three-digit location number (1-100 for phone memory or 101-255 for SIM memory\*), and then press **OK**. You will see Stored XXX.

or

Press **OK** to select the next available location. You will see Stored XXX.







7. Press and hold **C** to exit the menu.

**Tip:** Numbers should be entered in international format.


\* SIM memory is dependent on your SIM card.

**Tip:** *If you have more than one number for the same person, try attaching a descriptive tag to the name, like Home, Office, or Mobile.*

### **Use the Dedicated Keys**


1. **Enter the phone number** you want to store.
2. **Press**  to begin storing.
3. **Press**  to scroll to Add To Phone Memory or Add To SIM Card Memory, and then **press** . You will see Enter Number, followed by the number you entered.
4. **Press**  to accept the number. You will see Enter Name.
5. **Enter a name** (as described in “Entering Names” on page 65), and then **press** . You will see Enter Location.
6. **Enter a one-, two-, or three-digit location number**, and then **press** . You will see Stored XXX.

or

**Press**  to store the entry in the next empty memory location. You will see Stored XXX.


### **Adding Entry Messages**

When you enter the location number for your entry, you may see one of these messages:

Message	Description
Stored XXX	You have stored the entry.
Range XXX-XX	You have chosen a memory location outside the appropriate range. Enter a new number within the range listed on the display.
Overwrite?	You have chosen an occupied location. Press  to overwrite the location or press any other key to try another location.

## Entering Names

You can use the keypad to produce any letter in the alphabet. For example, press **2<sup>ABC</sup>** to enter the letters A, B, or C, as shown:

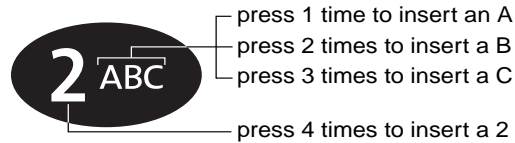

## Enter Characters

1. **Enter a letter** by pressing a key as many times as necessary.
2. **Press** to move the cursor.
3. **Repeat steps 1 and 2** as many times as necessary, and then **press** .

**Tip:** Press and hold any numeric key to toggle between uppercase and lowercase characters.

## Correct an Entry

To **delete** a character:

1. **Press** to scroll the cursor to the right of the character you want to delete.
  2. **Press** to delete one character at a time.
- or
- Press and hold** to clear the display.

To **add** a character:

1. **Press** to scroll the cursor to the location where you want to add a character.
2. **Enter a letter** by pressing a key as many times as necessary.

## Available Characters

Use this chart as a guide for producing characters:

<b>1</b>	Space . 1 ? ! , @ _ & : " ( ) ' ` ; i % £ \$ Space . 1 ? ! , @ _ & : " ( ) ' ` ; i % £ \$
<b>2<sub>ABC</sub></b>	A B C 2 Ä Å à æ ß Ç a b c 2 ä å à æ ß Ç
<b>3<sub>DEF</sub></b>	D E F 3 Δ É è Æ d e f 3 Δ é è Æ
<b>4<sub>GHI</sub></b>	G H I 4 Γ Ì g h i 4 Γ Ì
<b>5<sub>JKL</sub></b>	J K L 5 Λ j k l 5 Λ
<b>6<sub>MNO</sub></b>	M N O 6 Ñ Ò Ó Ô Õ m n o 6 ñ ò ó ô õ
<b>7<sub>QRS</sub></b>	P Q R S 7 Π ß Σ p q r s 7 Π ß Σ
<b>8<sub>TUV</sub></b>	T U V 8 Θ Û ù t u v 8 Θ ù ù
<b>9<sub>WXYZ</sub></b>	W X Y Z 9 Ξ Ψ w x y z 9 Ξ Ψ
<b>0+</b>	+ - 0 x * / = > < # + - 0 x * / = > < #

The upper line for each key shows the uppercase characters. The lower line for each key shows the lowercase characters.



## Using Pauses in Numbers

When you call automated systems, a recorded message prompts you for numbers such as PIN numbers and account numbers. You can store these numbers in the same memory location as the automated system's access number. Separate the numbers with "pauses"—special characters that tell your phone to wait a few seconds before sending additional numbers—and store the string in the same way you would other numbers.

### Enter Pauses in Numbers


1. **Enter the phone number** you use to access the automated system.
2. **Press and hold \***. You will see a  $\square$  (pause) character inserted into the number entry.
3. **Enter the next group of numbers.** For example, enter your PIN number. If the automated system requires a \* or #, enter those symbols, too.
4. **Repeat steps 2 to 3** as many times as necessary.
5. **To store the entry** follow the procedures in "Add an Entry" on page 63.

**Tip:** You can store 32 characters in a phone memory location, or 20 characters in a SIM card memory location. A pause is equal to one character.

**Tip:** *Your phone displays up to 32 digits (two rows of 16 digits) when you enter a number with pauses.*

## **Dial Numbers With Pauses**

To dial a number with pauses:

1. **Recall the entry.** (See “Locating Entries” on page 70.)
2. **Press**  **to place the call.**

The first pause in the number waits until the call is answered. When the automated system answers, your phone waits a few seconds and then automatically sends the next set of numbers, then the next, until all numbers are sent.


## Using Phone Number Prefixes

You can save time when you dial by storing the prefixes that you often use. This is sometimes called “postscribing.” Your satellite phone allows you to change or add to Phone Book entries without overwriting them.

Store a prefix in your Phone Book just as you would any other number. See “Storing Names and Numbers” on page 63.

### Use a Stored Prefix



To use a stored prefix:

1. **Recall the prefix** from your Phone Book. (See “Locating Entries” on page 70.)
2. **Add** the remaining numbers.
3. **Press**  to place the call.




 

**Tip:** Try naming the prefix by area, like Downtown, Suburbs, or Germans.

### Change Entry to a Similar Number

To change an entry to a similar number:

1. **Recall the number** from your Phone Book. (See “Locating Entries” on page 70.)
2. **Press**  to delete the unwanted digits.
3. **Enter** the replacement digits.
4. **Press**  to place the call.

## Getting to Personal Numbers...




1. Press  until you see Phone Book, and then press .
2. Press  to scroll to Personal Numbers, and then press .
3. Press  to scroll to one of the features described below.

## Locating Entries


### Find an Entry by Name

Search your Phone Book by the first few letters of the entry.

**Note:** If you have restricted access to either SIM card or phone memory, those entries will not be available. For more information, see "Preventing Access to the Phone Book" on page 74.

1. Follow the steps in "Getting to Personal Numbers..." to get to Find Entry By Name, and then press  to select. You will see Enter Name.
2. Enter one or more characters of the entry, and then press . If necessary, scroll to the entry you are looking for.
3. Press  to access options for that entry, and then proceed to "Calling, Modifying, or Erasing an Entry" on page 72.

**Tip:** Your phone sorts SIM card memory and phone memory together alphabetically.

**Tip:** Use the  or  to scroll through Phone Book entries.

## Getting to Personal Numbers...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Personal Numbers, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Find an Entry by Location***

Find an entry by its location number.

#### ***Use the Options Menu***

1. **Follow the steps in “Getting to Personal Numbers...”** to get to Find Entry By Location, and then press **OK** to select. You will see Enter Location.
2. **Enter the one-, two-, or three-digit location number**, and then press **OK**. You will see the entry displayed.

If you enter an empty location number, you will see Location XXX is Empty. Your phone then selects the next available location. If no numbers are stored, you will see No Numbers Stored.

3. Press **OK** to access options for that entry, and then proceed to “Calling, Modifying, or Erasing an Entry” on page 72.

#### ***Use the Dedicated Keys***

1. Press **MR**. You will see Enter Location.
2. **Enter the one-, two-, or three-digit location number** of the entry, and then press **OK**. You will see the entry displayed.

If you enter an empty location number, you will see Location XXX is Empty. Your phone then selects the next available location.

3. Press **OK** to call the displayed entry. You will see the number followed by Calling.

## Calling, Modifying, or Erasing an Entry

Once you have selected a Phone Book entry, you can call, change, or erase that entry.

### Call a Selected Entry

1. Find an entry, and then press **OK**. (See "Locating Entries" on page 70.)
2. Press **OK** until you see `Call Number`, and then press **OK**. You will see the `Selected Name` followed by calling.

### Modify a Name or Number

1. Find an entry, and then press **OK**. (See "Locating Entries" on page 70.)
2. Press **OK** until you see `Modify Name Or Number, View Options`, and then press **OK**. You will see `Edit Number`, followed by the phone number stored in that entry.
3. Enter changes to the number, and then press **OK**. You will see the name stored in that entry.
4. Enter changes to the name, and then press **OK**. You will see `Modified XXX`.

### Erase a Name and Number

1. Find an entry, and then press **OK**. (See "Locating Entries" on page 70.)
2. Press **OK** until you see `Erase Name And Number`, and then press **OK**. You will see `Erased xxx`.

**Tip:** For help entering letters or changing entries, see "Entering Names" on page 65.

## Getting to Personal Numbers...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Personal Numbers, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.





### ***Checking Phone Book Capacity***

Use this feature to see how many available memory locations you have in either SIM card memory or phone memory.

1. **Follow the steps in “Getting to Personal Numbers...”** to get to Check Capacity, and then press **OK** to select.
2. Press **MENU** until you see Check Phone Capacity or Check SIM Capacity, and then press **OK**. You will see XXX Unused Locations.
3. Press and hold **C** to exit the menu.

## Preventing Access to the Phone Book

You may want to restrict memory access when loaning your phone to others. You can choose to prevent access to the phone memory, SIM memory, or both.

1. **Follow the steps in** “Getting to Personal Numbers...” to get to Prevent Access, and then **press**  to select.
2. **Press**  until you see the restriction type you desire: No Memory Restrictions, To Phone Memory, To SIM Card Memory, or To Phone & SIM Memory.
3. **Press**  to select the displayed option. You will see Enter Security Code.
4. **Enter security code.** Enter your six-digit security code. You will see Completed.
5. **Press and hold**  to exit the menu.

**Tip:** The factory default security code is: 000000.

**Note:** If you restrict access to either phone memory or SIM memory and try to access an entry stored in that type of memory, you will see a list of the entries that are not restricted. If you prevent access to both your phone memory **and** SIM memory and then try to access an entry, you will see Restricted.



## Getting to Fixed Dialing...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Fixed Dialing, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

## Restricting Phone Use

You can restrict calling on your phone to a list of numbers that you create. When the fixed dialing feature is active, you can only call numbers or use prefixes (for example, country codes or area codes) that exactly match those stored in your fixed dial list. You can store up to 40 entries on your list. These entries are stored on your SIM card.

### Activate Fixed Dialing

Use this feature to activate fixed dialing. For instructions on how to store entries in the fixed dial list, see "Add an Entry" on page 76.









**Note:** The fixed dialing feature restricts access to your SIM memory.

1. **Follow the steps in "Getting to Fixed Dialing..."** to get to Setup Fixed Dialing, and then press **OK** to select. You will see Enter PIN2.
2. **Enter code.** Enter your SIM card PIN2 code, and then press **OK**.
3. Press **MENU** until you see On or Off, and then press **OK**. You will see Completed.
4. Press and hold **C** to exit the menu.

**Tip:** The default SIM card PIN2 code is 2222.

## Add an Entry

To add an entry to the fixed dial list:

1. **Follow the steps in** "Getting to Fixed Dialing..." to get to Setup Fixed Dialing, and then **press**  to select. You will see Enter PIN2.
2. **Enter code.** Enter your SIM card PIN2 code, and then **press** .
3. **Press**  until you see Add Entry, and then **press** . You will see Enter Number.
4. **Enter the number**, and then **press** . You will see Enter Name.
5. **Enter the name**, and then **press** . You will see Enter Location.
6. **Enter a location number**, and then **press** . You will see Stored.
7. **Press and hold**  to exit the menu.

**Tip:** Phone numbers must be in international format.

**Tip:** See "Entering Names" on page 65 for help entering letters.

## Getting to Fixed Dialing...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Fixed Dialing, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Erase an Entry***











To erase an entry in the fixed dial list:

1. **Follow the steps in "Getting to Fixed Dialing..."** to get to Setup Fixed Dialing, and then press **OK** to select. You will see Enter PIN2.
2. **Enter code.** Enter your SIM card PIN2 code, and then press **OK**.
3. Press **MENU** until you see Erase Entry, and then press **OK** to select. You will see the first entry in your fixed dial list.
4. Press **MENU** to scroll to the number you wish to erase. You will see Erased?.
5. Press **OK** to confirm. You will see Erased.
6. Press and hold **C** to exit the menu.

**Tip:** You should have received your SIM card PIN2 code from your service provider.

## ***Edit an Entry***

To edit an entry in the fixed dial list:

1. **Follow the steps in** "Getting to Fixed Dialing..." to get to **Setup Fixed Dialing**, and then **press**  to select. You will see **Enter PIN2**.
2. **Enter code**. Enter your SIM card PIN2 code, and then **press** .
3. **Press**  until you see **Edit Entry**, and then **press**  to select. You will see the first entry in your fixed dial list.
4. **Press**  to scroll to the entry you want to change, and then **press** . You will see the current number for that location.
5. **Enter changes** to the number, and then **press** . You will see the current name for that location.
6. **Enter changes** to the name, and then **press** . You will see the current location.
7. **Enter a new location**, and then **press** . You will see **Modified**.
8. **Press and hold**  to exit the menu.

## Getting to Fixed Dialing...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to Fixed Dialing, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### *View Your Fixed Dialing List*

This feature enables you to review, but not change, your fixed dial list.

1. **Follow the steps in** “Getting to Fixed Dialing...” **to get to View Fixed Dial List, and then press** **OK** **to select. You will see the first number on your fixed dial list.**
2. **Press** **MENU** **to scroll through the numbers on your fixed dial list.**
3. **Press and hold** **C** **to exit the menu.**

## Getting to Phone Book Features...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### ***Viewing the Last Ten Calls Made or Received***

Your phone saves the last ten phone numbers you dialed.

To view the phone numbers of the last ten calls you have made:

1. Follow the steps in "Getting to Phone Book Features..." to get to Last Ten Calls, and then press **OK** to select.
2. Press **MENU** to scroll to Last Calls Made or Erase All Numbers, and then press **OK** to select.
3. If you select Last Calls Made, press **MENU** to scroll to the number you are looking for, and then press **OK** to place a call to that number.

or

If you select Erase All Numbers, you will see Completed.




4. Press and hold **C** to exit the menu.

**Tip:** *If you want to add a number from Last Ten Calls to your Phone Book, press **M+** when the number is displayed, then follow the steps in "Storing Names and Numbers" on page 63.*



## Viewing and Modifying Your Phone Numbers

### View Your SIM Card Phone Number(s)

You can program up to three phone numbers (such as your voice and data phone numbers) onto your SIM card. Use this feature to view your phone number(s).

1. **Follow the steps in** "Getting to Phone Book Features..." **to get to** My Phone Number(s).
2. **Press**  **to select.** You will see your phone's voice phone number followed by *Modify?*.
3. **Press**  **to scroll through your numbers.**
4. **Press and hold**  **to exit the menu.**

**Note:** If you do not see your phone number(s), they have not been programmed onto your SIM card. You can program your voice phone number and other phone numbers onto your SIM card by following the steps described in "Modify Your Phone Number(s)" on page 82.

**Tip:** Pressing   **also brings up your phone number.**

## Getting to Phone Book Features...

1. Press **MENU** until you see *Phone Book*, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by *Select?*.

### **Modify Your Phone Number(s)**

Use this feature to modify or program your voice phone number onto your SIM card. You can also program other phone numbers (for example, a data phone number) onto your SIM card. You can have up to three phone numbers.

1. **Follow the steps in** “Getting to Phone Book Features...” to get to *My Phone Number(s)*.
2. Press **OK** to select. You will see your phone's voice phone number followed by *Modify?*.
3. Press **MENU** to scroll to the number you want to modify.
4. Press **OK** to modify the number. You will see *Edit Number* followed by the number for the selected entry.
5. **Enter changes** to the number, and then press **OK**. You will see *Edit Name* followed by the name for the entry selected.
6. **Enter changes** to the name (as described in “Entering Names” on page 65) and then press **OK**. You will see *Stored*.
7. **Press and hold** **C** to exit the menu.







## ***Using One-Touch Dialing***

One-touch dialing enables you to place calls instantly. You can choose to dial the phone numbers in the first nine memory locations in either your SIM memory, phone memory, or your fixed dial list. You choose which type of memory you want to be active with this feature.

### ***Set Up One-Touch Dialing***

To set the active memory for one-touch dialing:

1. **Follow the steps in "Getting to Phone Book Features..."** to get to **One-Touch Dial Settings**, and then **press**  to select.
2. **Press**  to scroll through **To Phone Memory**, **To SIM Card Memory**, or **To Fixed Dial List**, and then **press**  to select the displayed option. You will see **Completed**.
3. **Press and hold**  to exit the menu.

## Getting to Phone Book Features...

1. Press **MENU** until you see Phone Book, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Use One-Touch Dialing

To use one-touch dialing:




**Press and hold** the appropriate digit key.

**Tip:** *You do not need to press **OK** to call the number when you use one-touch dialing.*

For example, press and hold **2<sup>ABC</sup>** to dial the number stored in location 2 of your phone memory, location 2 of your fixed dial list, or 102 of your SIM memory, depending on your setting.

## Viewing Service Phone Numbers


 

 
 


The show services feature provides a read-only list of service phone numbers that are pre-programmed by your service provider. This list resides on the SIM card and allows for call placement only.

 
1. **Follow the steps in** “Getting to Phone Book Features...” to get to *Show Services*.
2. **Press**  to select. You will see a list of service phone numbers.
3. **Press**  to scroll to the number you are looking for.
4. **Press**  to place a call to that number.

or

**Press and hold**  to exit the menu.

**Note:** If you do not see any service dialing number(s), they have not been programmed onto your SIM card. Contact your service provider for more information.

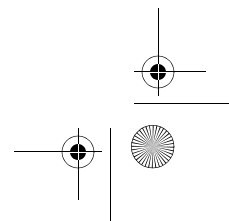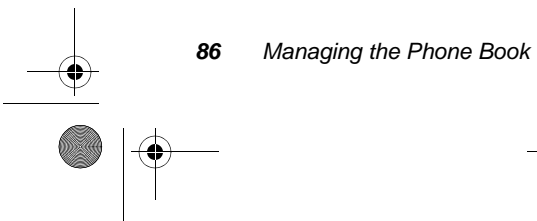

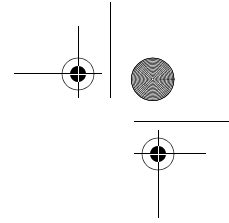
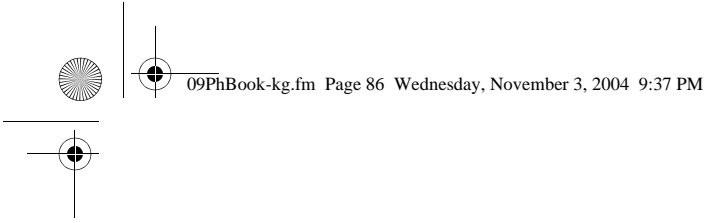




## ***Using Calling Features***

---

    This chapter describes call-related features. Many of these features are network features that you must subscribe to in order to access.



## Call Related Features Menu

### Call Related Features

- Show Battery Meter
- Show Signal Strength
- Pending Call Drop
  - On/Off
- Call Forwarding<sup>1</sup>
  - Forward When Unavailable
    - On/Off
  - Forward All Calls
    - On/Off
  - Detailed Forwarding<sup>2</sup>
    - Forward Voice Calls
      - Forward All Voice Calls
        - On/Off
      - If Busy
        - On/Off
      - If No Answer
        - On/Off
      - If Not Reachable
        - On/Off
    - Forward Data Calls
  - Cancel All Forwarding
- Call Waiting<sup>1</sup>
  - On/Off
- Call Barring<sup>2</sup>
  - Bar Outgoing Calls
    - Intl Calls
    - Intl Calls Except Home
    - All Calls
    - On/Off
  - Bar Incoming Calls
    - When Roaming
    - All Calls
    - On/Off
  - Cancel All Barring
  - Change Bar Password

<sup>1</sup> This feature is network and subscription dependent.

<sup>2</sup> This feature is network and subscription dependent. It is available only when the extended menus are activated.

## Getting to Call Forwarding...

1. Press **MENU** until you see Call Related Features, and then press **OK**.
2. Press **MENU** to scroll to Call Forwarding, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

## Forwarding Calls When Unavailable

Use this feature when you are unable to answer your phone calls.






**Note:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information.

To activate this feature:

1. **Follow the steps in "Getting to Call Forwarding..."** to get to Forward When Unavailable, and then press **OK** to select. Your phone takes a moment to request the current setting from the network.
2. Press **MENU** to scroll to On or Off, and then press **OK** to select.
  - If you select On, continue with **step 3**
  - If you select Off, continue with **step 5**
3. Press **MENU** to scroll to Voicemail or Other Number, and then press **OK** to select.
  - If you select Voicemail, continue with **step 5**
  - If you select Other Number, then you will see Enter Number. Continue with **step 4**
4. **Enter the number** you want calls forwarded to, and then press **OK**.
5. Press and hold **C** to exit the menu.

**Tip:** If you have not yet stored a voicemail number, go to page 122 to learn how.

## Getting to Call Forwarding...




1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to Call Forwarding, and then press .
3. Press  to scroll to one of the features described below.

### Forwarding All Your Calls

 
This feature forwards all of your calls to the number you choose. Your phone does not ring.

**Note:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information.

To activate this feature:

1. Follow the steps in "Getting to Call Forwarding..." to get to Forward All Calls, and then press  to select. Your phone takes a moment to request the current setting from the network.
2. Press  to scroll to either On or Off, and then press  to select.
  - If you select On, your phone takes a moment to contact the network and update the setting. You will see Call Forward On. Continue with **step 3**
  - If you select Off, continue with **step 5**









3. Press to scroll to Voicemail or Other Number, and then press to select.

- If you select Voicemail, continue with **step 5**
- If you select Other Number, then you will see Enter Number. Continue with **step 4**





    
4. Enter the number you want calls forwarded to, and then press .

5. Press and hold to exit the menu.

**Tip:** *If you have not yet stored a voicemail number, go to page 122 to learn how.*



## Getting to Call Forwarding...

1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to Call Forwarding, and then press .
3. Press  to scroll to one of the features described below.

## Using Detailed Call Forwarding





This feature lets you select the specific situations when you want your calls forwarded. The Forward When Unavailable and Forward All Calls features override the settings you select here.

 
**Notes:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information

This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 137

### Voice Calls

To forward voice calls:

1. Follow the steps in "Getting to Call Forwarding..." to get to Detailed Forwarding, and then press  to select. Your phone takes a moment to request the current setting from the network.
2. Press  to scroll to Forward Voice Calls, and then press  to select.
3. Press  to scroll to the option you desire: Forward All Voice Calls, If Busy, If No Answer, or If Not Reachable.







4. Press to select the displayed option. Your phone takes a moment to contact the network and update the setting. You will see **Call Forward On**.
5. Press to scroll to either **Voicemail** or **Other Number**, and then press .





    
  - If you select **Voicemail**, continue with **step 7**
  - If you select **Other Number**, then you will see **Enter Number**. Continue with **step 6**

6. Enter the number you want calls forwarded to, and then press .
7. Press and hold to exit the menu.

**Tip:** *If you have not yet stored a voicemail number, go to page 122 to learn how.*




## Getting to Call Forwarding...

1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to Call Forwarding, and then press .
3. Press  to scroll to one of the features described below.

## Canceling All Forwarding

This feature cancels all call forwarding settings.




**Note:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information.

1. **Follow the steps in** "Getting to Call Forwarding..." to get to Cancel All Forwarding, and then press  to select.

Your phone takes a moment to contact the network and update the setting. You will see Call Forward Off. All call forwarding settings are now set to Off.

2. **Press and hold**  to exit the menu.

## Getting to Call Related Features...

1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.

### ***Restricting Calls with Call Barring***

You can use call barring to restrict both incoming and outgoing calls. Call barring is useful if you are loaning your phone to others or when you wish to control incoming calls. When you change one of your call barring settings, your phone takes a few seconds to request the setting from the network.

**Notes:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information.

This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 137

Call forwarding must be disabled before call barring is activated.

## Getting to Call Barring...

1. Press **MENU** until you see Call Related Features, and then press **OK**.
2. Press **MENU** to scroll to Call Barring, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Bar Outgoing Calls

This feature enables you to receive incoming calls but prevents outgoing calls.

To bar outgoing calls:

1. **Follow the steps in "Getting to Call Barring..."** to get to Bar Outgoing Calls, and then press **OK** to select. Your phone takes a moment to request the current setting from the network.
2. Press **MENU** to scroll to Intl Calls, Intl Calls Except Home, All Calls, or Off, and then press **OK** to select. You will see Enter Password.

**Note:** Since all Iridium calls are international, Intl Calls, Intl Calls Except Home, are not functional selections.






3. **Enter your bar password**, and then press **OK**. You will see Call Barring On or Call Barring Off.
4. **Press and hold C** to exit the menu.

**Tip:** The default password is 0000.

## **Bar Incoming Calls**

This feature allows you to place calls, but refuses incoming calls. Callers hear a recording telling them that you are unavailable. To be sure not to miss a call, see "Using Detailed Call Forwarding" on page 92.

To bar incoming calls:

1. **Follow the steps in "Getting to Call Barring..."** to get to Bar Incoming Calls, and then **press**  to select. Your phone takes a moment to request the current setting from the network.
2. **Press**  to scroll to When Roaming, All Calls, or Off, and then **press**  to select. You will see Enter Password.
3. **Enter your bar password**, and then **press** . You will see Call Barring On or Call Barring Off.
4. **Press and hold**  to exit the menu.

## Getting to Call Barring...

1. Press **MENU** until you see Call Related Features, and then press **OK**.
2. Press **MENU** to scroll to Call Barring, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### **Cancel All Barring**






To cancel all call barring settings:

1. **Follow the steps in "Getting to Call Barring..."** to get to Cancel All Barring, and then press **OK** to select. You will see Enter Password.
2. **Enter your bar password**, and then press **OK**. You will see Call Barring Off. All call barring settings are now set to Off.
3. **Press and hold C** to exit the menu.






## ***Change Bar Password***

When you subscribe to call barring, your service provider gives you a four-digit bar password. Use this feature to change it to something easy to remember.

1. **Follow the steps in "Getting to Call Barring..."** to get to Change Bar Password, and then **press**  to select. You will see Enter Password.
2. **Enter your bar password**, and then **press** . You will see Enter New Password.
3. **Enter the new bar password**, and then **press** .
4. **Enter the new bar password** again to confirm, and then **press** .
5. **Press and hold**  to exit the menu.


**Tip:** *If you are changing the password for the first time, use the password 0000.*

## Getting to Call Related Features...


1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Viewing the Battery Meter


Use this feature to check the charge level on your battery.

1. Follow the steps in "Getting to Call Related Features..." to scroll to Show Battery Meter, and the press  to select.

You will see the battery meter:

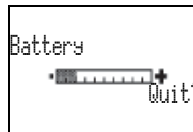


Low Charge

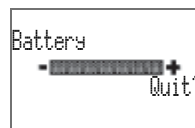


High Charge

You may also see one of the following messages:


Message	Description
Charging Battery	The battery is being charged.
Fast Charge Completed	The battery has completed charging.
Invalid Batt.	You have an unapproved battery inserted in your phone.

 2. Press and hold  to exit.



## Viewing Signal Strength

Use this feature to check the strength of the signal that your phone is receiving from the Iridium satellite network.

 
 
 
 
1. **Follow the steps in** "Getting to Call Related Features..." to get to Show Signal Strength.
2. **Press**  to select. You will see Checking Signal....

The signal strength indicator is located in the upper left corner of the display:






Signal strength is sampled every four to five seconds; the indicator shows the average strength for the last three samples. The more segments displayed in the bar graph, the stronger the signal. Five bars indicate full signal strength. The indicator shows the tower icon but no bars when the signal is weak.

3. **Press and hold**  to exit the menu.







## Getting to Call Related Features...

 
1. Press  until you see Call Related Features, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.

## Deactivating Pending Call Drop Signal

Under rare circumstances, due to system overcapacity or a satellite outage, a satellite may not be available to take your call. When this happens, your phone notifies you with a series of three consecutive tones and displays Pending Call Drop. The tones continue periodically until a new satellite moves into range or the call is dropped.

To activate or deactivate the alert tones:





1. Follow the steps in the "Getting to Call Related Features..." to get to Pending Call Drop, and then press  to select.
2. Press  to scroll to either On or Off, and then press  to select.
3. Press and hold  to exit the menu..




## ***Using Message Services***

    ---





You can receive voicemail notification messages, and send and receive numeric and text messages through your Personal Mailbox service—around the world. Wherever you are, you can have instant reference to all your communication.

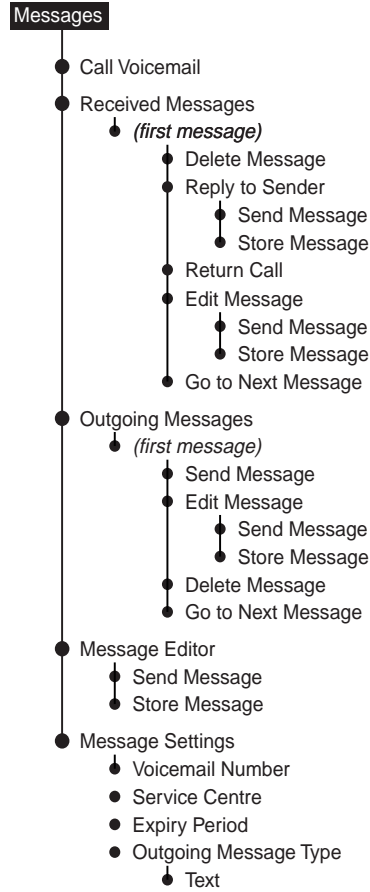

## Messages Menu




## Getting to Message Features...

1. Press  to go directly to the Messages menu.  
or  
Press  until you see Messages, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.

## Checking Your Voicemail

This feature makes checking your voicemail simple.

1. **Follow the steps in** “Getting to Message Features...” to get to Call Voicemail.
2. Press  to select. You will see your voicemail number followed by Callina.

If you have not previously stored a voicemail number, then you will see No Number Available. See “Store Your Voicemail Number” on page 122 for instructions on how to enter a voicemail number.


## ***Managing Your Received Messages***

### ***How Your Phone Notifies You of Messages***

If your phone is powered on, it notifies you of received messages in the following ways:

- **An alert sounds and/or the phone vibrates**

Your phone beeps and/or vibrates three times to inform you of an incoming message. (See page 130 for instructions on how to set your phone's alert.)

- **The  (message) indicator is displayed**
- **The message is displayed immediately** and remains on the display for several seconds.

or

- **Message Read Now? is displayed** if the message is an alphanumeric text message of up to 160 characters. For more information see "Read a New Message" on page 108

### ***How Messages Are Stored***

Your phone stores all messages on your SIM card.

If the message indicator is flashing, your SIM card is full. See "Delete a Message" on page 110 to make room for the new message.





 
 
 
## ***What Messages Contain***

You can receive short text or numeric messages in your Personal Mailbox. Text messages may contain up to 160 characters. Numeric messages—typically phone numbers—may contain up to 20 digits.

Your personal mailbox works along with Call Forwarding. For more information see “Personal Mailbox” on page 47, and the Call Forwarding feature descriptions on pages 89-94.

Messages contain multiple screens with the following information:

- the message
- the date and time the message was sent
- the phone number (if available) from which the message was sent



## ***Accessing Received Messages***

### ***Read a New Message***

#### ***Notification Messages***

An incoming voicemail notification message automatically scrolls across your screen. You can:

- Press **OK** to store it on your SIM card
- Press **C** to delete it

#### ***Text Messages***

When you receive a new alphanumeric message, you will see *Message Read Now?* To read it:

1. Press **OK** and continue with **step 2**.







or

Press **C** to read the message later. See "Read a Stored Message" on page 109.

2. Press **MENU** to move forward through a message one screen at a time.
3. Press **OK** to access menu options for the message. These options are described on pages 110-112.




**Note:** If the message storage space on your SIM card is full, you will not be able to store a message for later retrieval. Use the delete message feature (page 110) to make room for new messages on your SIM card.

## Getting to Received Messages...

1. Press  to go directly to the Messages menu.  
or  
Press  until you see Messages, and then press .
2. Press  to scroll to Received Messages, and then press .
3. Press  to scroll to one of the features described below.





### ***Read a Stored Message***

To read a stored message that you have received:

1. **Follow the steps in** "Getting to Received Messages..." to enter the message center. You will see the number of messages stored, followed by the first message. If you do not have any messages, you will see *No Messages*.
2. Press  to scroll through the message one screen at a time.
3. Press  to access menu options for the message.  
or  
Press and hold  to exit the menu.





### ***Go to the Next Message***

To go to the next message:

1. **Follow the steps** in “Read a Stored Message” on page 109.
2. **Press**  until you see *Go To Next Message* and then **press** . You will see the next message. If you are at the end of your message list you will see the first message again.
3. **Press**  to scroll through the message one screen at a time.
4. **Repeat steps 2 to 3** to read all of your messages.
5. **Press and hold**  to exit the menu.




### ***Delete a Message***

Use this feature to make room for new messages on your SIM card.




1. **Follow the steps** in “Go to the Next Message” (above) until you see the message you want to delete, and then **press** .
2. **Press**  until you see *Delete Message*, and then **press** . You will see *Message Deleted*.
3. **Press and hold**  to exit the menu.

## ***Reply to Sender***

Use this feature to reply to a message.




1. **Follow the steps** in “Go to the Next Message” on page 110 until you see the message you want to reply to, and then **press**  .
2. **Press**  until you see Reply to Sender and then **press**  .
3. Compose your message. For more information, see the section titled “Managing Outgoing Messages” on page 113.

If you are replying to an email, the sender's email address will appear, and a blinking cursor indicates where you should begin composing your message. Note: Leave a space between the email address and the beginning of your message.

4. **Press**  . You will see Send Message.
5. **Press**  . You will see Enter Number. If available, the sender's phone number will automatically appear. If you are replying to an email, the standard email response number (00\*2 or +\*2) will appear.
6. Enter number (if none is present) and **press**  to send the message.

## ***Edit a Received Message***





You can edit a message that you have received, then send the modified message and/or store it in the outgoing messages list.

1. **Follow the steps** in “Go to the Next Message” on page 110 until you see the message you want to edit, and then **press** .
2. **Press**  until you see `Edit Message` and then **press** .

The message is copied to the message editor. You will see the final portion of the message displayed in the editing area. The cursor is placed at the end of the message.

For instructions on how to edit a stored message, see “Edit a Stored Message” on page 120.

## Getting to Message Features...


1. Press  to go directly to the Messages menu.  
or  
Press  until you see Messages, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.


## Managing Outgoing Messages

You can create a new message and send it immediately, or store it in an outgoing messages list for later use. You can also edit a message that you have received, then send and/or save the modified message. Messages are created and edited in the message editor.

### Message Editor

The message editor lets you create a new message or modify a stored message.

You use the keypad to create or edit a message. You can produce any letter in the alphabet by pressing the appropriate key. For example, press  to enter the letters A, B, or C, as shown:

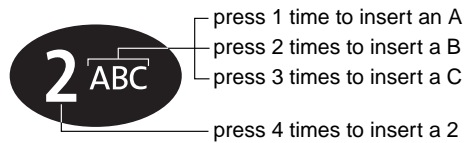


For a complete list of the characters you can enter from the keypad, see page 66.



**Tip:** Press and hold any numeric key to toggle between uppercase and lowercase characters.

## Create a New Message

To create a new message in the message editor:


1. **Follow the steps in** "Getting to Message Features..." on page 113 to get to Message Editor, and then **press**  to select.

The message editor displays the contents of the last message entered. If there are no previous messages, the cursor is placed in the upper left corner of the editing area.

2. **Press and hold**  to clear the entire message editor contents, if necessary.
3. Begin composing your message. **Enter a letter** by pressing a key as many times as necessary.
4. **Press**  to advance the cursor.
5. **Repeat steps 3 and 4** as many times as necessary to complete your message.

Lines of text are automatically formatted in the display. When you reach the bottom of the editing area, the top lines of text scroll up and off the display in order to keep the cursor and the last few lines of text in view.

When you have finished composing your message:

6. **Press**  to access options for that entry.

Message editor menu options let you send the message immediately or store it for later use. These options are described on pages 116-117.



## **Create a New Email Message**

**Note:** You must subscribe to this network feature through your service provider. Contact your service provider for additional information.


1. **Follow the steps** in “Create a New Message” on page 114 until you get to step 3.

2. Compose your message, starting with the destination email address, followed by a space, and then your message.

For example:

**johndoe@domain.com This is a sample message.**

Note: The maximum length of the entire message (including the destination email address) is 160 characters. The editor will stop after the 160th character has been entered



3. **Press**  to access options for that entry.

## ***Edit a Message***

You can edit a new message at any time while you are creating it.

You can also edit received messages or messages stored in the outgoing messages list. See “Edit a Received Message” on page 112 for instructions on how to copy a received message into the message editor. See “Edit a Stored Message” on page 120 for instructions on how to copy an outgoing message into the message editor.


To **delete** text in a message:

1. Press  to scroll the cursor to the right of the text you want to delete.
2. Press  to delete one character at a time.

or





Press and hold  to clear the display.

To **add** text to a message:

1. Press  to scroll the cursor to the location where you want to add new text.
2. **Enter a letter** by pressing a key as many times as necessary.

## ***Send a Message***

To send a message from the message editor:

1. Press  to access message editor menu options.
2. Press  until you see `Send Message` and then press . You will be prompted to enter the destination address or phone number for the message.
3. **Enter the destination address** and then press  to send the message.

If the destination is a phone number, enter it beginning with “00” or “+”. If the destination is an email address, enter “00\*2” or “+\*2”.

The message is sent to your message service centre, which forwards the message to its final destination. You will see *Message Sent* when the message arrives at the service centre.

If the message cannot be delivered to the service centre, you will see *Message Failed*, followed by *Resend?* on the next line. You can:

Press **OK** to resend the message.

or

Press **C** to abandon the attempt to send the message at this time. See “Store a Message” on page 117 for instructions on how to store the message for later mailing.

If you have not previously stored a service centre number, then you will see *No Service Centre*. See “Enter Service Centre Number” on page 123 for instructions on how to enter a service centre number.







### ***Store a Message***

To store the contents of the message editor to the outgoing messages list:

1. Press **OK** to access message editor menu options.
2. Press **MENU** until you see *Store Message* and then press **OK**. You will see *Stored to Outgoings*.

Outgoing messages are stored on your SIM card. When the SIM card is full (indicated by a flashing message indicator), you will not be able to store a message for later retrieval. Use the delete message feature (page 121) to make room for new messages on your SIM card.



## Getting to Outgoing Messages...

1. Press  to go directly to the Messages menu.  
or  
Press  until you see *Messages*, and then press .
2. Press  to scroll to *Outgoing Messages*, and then press .
3. Press  to scroll to one of the features described below.

### ***Read a Stored Message***

This feature displays the first message stored in the outgoing messages list.

To read a stored message:

1. **Follow the steps in** "Getting to Outgoing Messages..." **to enter the message center.** You will see the number of messages stored, followed by the first message. If you do not have any messages, you will see *No Messages*.
2. Press  to scroll through the message one screen at a time.
3. Press  to access menu options for the message.

or

Press and hold  to exit the menu.

### ***Go to the Next Message***

This feature takes you to the next message in the outgoing messages list.




To go to the next message:

1. **Follow the steps** in “Read a Stored Message” on page 118.
2. **Press**  until you see *Go To Next Message* and then **press** . You will see the next message.
3. **Press**  to scroll through the message one screen at a time.
4. **Repeat steps 2 to 3** to read all of your messages.
5. **Press and hold**  to exit the menu.

### ***Send a Stored Message***

This feature sends a message stored in the outgoing messages list.

To send a stored message:

1. **Follow the steps** in “Read a Stored Message” on page 118.
2. **Press**  until you see *Send Message* and then **press** . You will be prompted to enter the destination address (phone number) for the message.
3. **Enter the destination address** and then **press**  to send the message.


If the destination is a phone number, enter it beginning with “00” or “+”. If the destination is an email address, enter “00\*2” or “+\*2”.

The message is sent to your message service center, which forwards the message to its final destination. You will see *Message Sent* when the message arrives at the service center.

If the message cannot be delivered to the service centre, you will see *Message Failed*, followed by *Resend?* on the next line. You can:

Press  to resend the message.

or




Press  to abandon the attempt to send the message at this time.

If you have not previously stored a service center number, then you will see *No Service Centre*. See “Enter Service Centre Number” on page 123 for instructions on how to enter a service center number.

### ***Edit a Stored Message***

You can edit a message that you have stored in the outgoing messages list.

To edit a stored message:

1. **Follow the steps** in “Go to the Next Message” on page 119 until you see the message you want to edit, and then **press** .
2. **Press**  until you see *Edit Message* and then **press** .

The message is copied to the message editor. You will see the final portion of the message displayed in the editing area. The cursor is placed at the end of the message.





For instructions on how to edit a received message, see “Edit a Received Message” on page 112.

 
 
 


## **Delete a Stored Message**







Use this feature to make room for new messages on your SIM card.

To delete a stored message:

1. **Follow the steps** in "Go to the Next Message" on page 119 until you see the message you want to delete, and then **press**  .
2. **Press**  until you see Delete Message, and then **press**  . You will see Message Deleted.
3. **Press and hold**  to exit the menu.



## Getting to Message Settings...







1. Press  to go directly to the Messages menu.  
or  
Press  until you see Messages, and then press .
2. Press  to scroll to Message Settings, and then press .
3. Press  to scroll to one of the features described below.

## Managing Other Message Settings

**Tip:** Use pause dialing to store your voicemail access and PIN numbers together. See "Using Pauses in Numbers" on page 67.

### Store Your Voicemail Number

To store a voicemail number:






1. Follow the steps in "Getting to Message Settings..." to get to Voicemail Number, and then press  to select. You will see Enter Voicemail Number followed by your current voicemail number. If this is the first time you have stored a number, continue with **step 3**.
2. Press  to select Voicemail Number. Press  to clear one digit at a time, or press and hold  to erase the entire number.
3. Enter the new number, and then press . You will see Completed.
4. Press and hold  to exit the menu.



## Enter Service Centre Number





 

Use this feature to enter the number for the service center that forwards your outgoing messages. You must specify a service number before you can send any messages.

To enter the service center number:

1. **Follow the steps in** “Getting to Message Settings...” on page 122 to get to Service Centre, and then **press**  to select. You will see Enter Service Number followed by your current service center number. If this is the first time you have stored a number, continue with **step 3**.
2. **Press**  to clear one digit at a time, **or press and hold**  to erase the entire number.
3. **Enter the new number**, and then **press** . You will see Completed.
4. **Press and hold**  to exit the menu.

**Tip:** *The service center number is provided by your service provider.*






## Getting to Message Settings...

1. Press  to go directly to the Messages menu.  
or  
Press  until you see Messages, and then press .
2. Press  to scroll to Message Settings, and then press .
3. Press  to scroll to one of the features described below.

### Set Expiry period

This feature specifies the maximum amount of time, in hours, that an unforwarded outgoing message will remain at the service center before it is deleted.

To set the message expiration period:

1. Follow the steps in "Getting to Message Settings..." to get to Expiry Period, and then press  to select. You will see Enter Hours followed by the current setting.
2. Press  to clear one digit at a time, or press and hold  to erase the entire number.
3. Enter the new number, and then press . You will see Hours followed by the number you entered.
4. Press and hold  to exit the menu.





**Tip:** The default expiration period setting is 7 days (168 hours).


 

 
 


## ***Specify Outgoing Message Type***

 
You can send messages to a device which interprets them in a format other than text. Your service center converts the messages before forwarding them to the destination address.

**Note:** Currently, the only supported message type is "TEXT".

To specify the outgoing message type:





1. **Follow the steps in "Getting to Message Settings..."** on page 124 to get to **Outgoing Message Type**, and then **press**  to select.
2. **Press**  to scroll to the desired type, and then **press**  to select it.
3. **Press and hold**  to exit the menu.

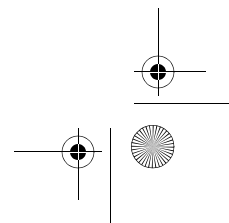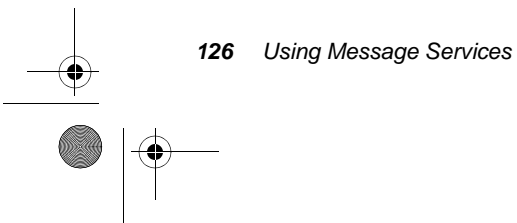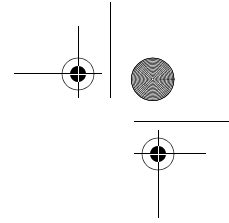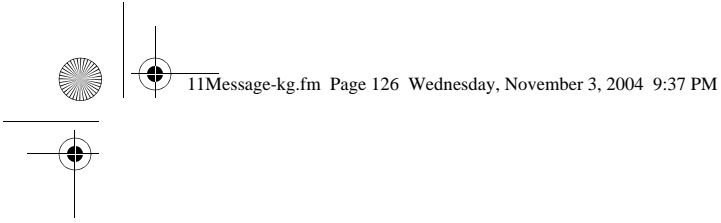



## **Customizing Phone Features**

    Once you are comfortable with the basic features of your new phone, use the Phone Setup menu to configure your phone the way you like it.



## Phone Setup Menu

### Phone Setup




- Adjust Ring Volume
- Ring or Vibrate
  - Ring Only
  - Vibrate Only
  - Vibrate Then Ring
  - No Ring or Vibrate
- Set Ringer Tone
  - Standard Tone
  - High Tone
- Phone Lock
  - Automatic Lock
    - On/Off
  - Lock Now
  - Change Unlock Code
- Require SIM Card PIN
  - On/Off
  - Change SIM PIN Code
- Change SIM PIN2 Code
- New Security Code
- Extended Menus
  - On/Off

*The following Phone Setup menu items are available only when the extended menus are activated.*

- Show Time and Date<sup>1</sup>
  - Show Home Time + Date
  - Show Away Time + Date
  - Change Clock Display
    - Home Time
    - Away Time
- Set Time and Date<sup>1</sup>
  - Set Home Time + Date
  - Set Away Time + Date
- Set Time Format<sup>1</sup>
  - 12 Hour
  - 24 Hour
- Language Selection<sup>1</sup>
  - English
  - Türkçe
- Lights<sup>1</sup>
  - On/Off
- Select Keypad Tones<sup>1</sup>
  - Normal Tones
  - Single Tone
  - No Tones
- Phone Status<sup>1</sup>
  - Status Review
  - Master Reset
  - Master Clear

<sup>1</sup> This feature is available only when the extended menus are activated.

## Getting to Phone Setup...



1. Press  until you see Phone Setup, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by Select?.


## Managing Phone Ringer Settings

You can adjust your phone's ringer volume and tone, and set the phone to ring or vibrate to notify you of incoming calls.

### Adjust the Ringer Volume

Use this feature to adjust the volume of the ringer. The phone sounds the new volume level as you adjust it.





1. Follow the steps in "Getting to Phone Setup..." to get to Adjust Ringer Volume, and then press  to select.
2. **Increase the volume** by pressing the upper volume control key on the side of the phone.  
or  
**Decrease the volume** by pressing the lower volume control key on the side of the phone.
3. Press and hold  to exit the menu.

**Tip:** You can also press , and then the up or down volume control key.

**Tip:** *If you select Vibrate then Ring, your phone vibrates for two cycles, and then rings.*





### **Set the Phone to Ring or Vibrate**

This feature is ideal for situations where a ringing phone is inappropriate or in noisy places where you might not hear the ringer. The vibrate alert function notifies you of incoming calls by discreet vibrations.

1. **Follow the steps in** "Getting to Phone Setup..." **to get to Ring or Vibrate, and then press**  **to select.**
2. **Press**  **to scroll to Ring Only, Vibrate Only, Vibrate then Ring, or No Ring or Vibrate, and then press**  **to select the displayed option. You will see Completed.**
3. **Press and hold**  **to exit the menu.**






### **Set the Ringer Tone**

Select your favorite tone from 10 different options.

1. **Follow the steps in** "Getting to Phone Setup..." **to get to Set Ringer Tone, and then press**  **to select.**
2. **Press**  **to scroll through the ringer tone options. You will hear a one-ring-cycle demonstration of each tone as its name is displayed.**
3. **Press**  **to select the desired ringer tone.**
4. **Press and hold**  **to exit the menu.**



## Getting to Phone Lock...





1. Press  until you see Phone Setup, and then press .
2. Press  to scroll to Phone Lock, and then press .
3. Press  to scroll to one of the features described below.

## Locking and Unlocking Your Phone

These features can help you prevent unwanted use of your phone.


### Lock the Phone Automatically

Use this feature to set your phone to lock itself every time it is powered on.

1. Follow the steps in "Getting to Phone Lock..." to get to Automatic Lock, and then press  to select.
2. Press  to choose On or Off, and then press  to select. You will see Completed.
3. Press and hold  to exit the menu.


### Lock the Phone Instantly

Use this feature to lock your phone immediately.

1. Follow the steps in "Getting to Phone Lock..." to get to Lock Now.
2. Press  to select. You will see: Locked.

**Note:** Once you unlock your phone, it remains unlocked until you lock it again.






### Unlock the Phone

1. Enter unlock code. Enter your four-digit phone unlock code.
2. Press .

**Tip:** The factory default unlock code is 1234.

## Change the Unlock Code

The unlock code is originally set to 1234. You should change it as soon as possible.

1. **Follow the steps in "Getting to Phone Lock..."** to get to Change Unlock Code, and then **press**  to select. You will see Enter Security Code.
2. **Enter security code.** Enter your six-digit security code. You will see your current lock code and Enter Phone Unlock Code.
3. **Press**  to clear one digit at a time, **or press and hold**  to clear all the digits.
4. **Enter new code.** Enter a new four-digit unlock code, and then **press** . You will see Phone Lock and the new lock code.
5. **Press and hold**  to exit the menu.

**Tip:** The factory default security code is 000000.

## Getting to Require SIM Card PIN...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to Require SIM Card PIN, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by View Options?.

### ***Protecting the SIM Card***

You can use a Personal Identification Number (PIN) code to protect the information stored on your SIM card even when it is inserted into someone else's phone.

#### ***Activate and Deactivate the SIM Card PIN Code***

When you activate the SIM card PIN code, your phone requests the code whenever the phone is powered on. To change this setting, you need to enter the PIN code that your service provider gave you.

1. Follow the steps in "Getting to Require SIM Card PIN...".
2. Press **MENU** to scroll to On or Off, and then press **OK**. You will see Enter PIN.
3. **Enter code.** Enter your four- to eight-digit SIM card PIN code, and then press **OK**. You will see Completed.
4. Press and hold **C** to exit the menu.

**Tip:** You should have received your SIM card PIN code from your service provider.

## Getting to Require SIM Card PIN...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to Require SIM Card PIN, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by View Options?.

### Change the SIM Card PIN Code

To choose your own PIN code:

1. Follow the steps in "Getting to Require SIM Card PIN..." to get to Change SIM PIN Code, and then press **OK** to select. You will see Enter Old PIN.
2. Enter the current PIN code, and then press **OK**. You will see Enter New PIN.
3. Enter a new PIN code, and then press **OK**. You will see Repeat New PIN.
4. Re-enter the new PIN code, and then press **OK** again. You will see Completed.
5. Press and hold **C** to exit the menu.

### Unlock the PIN Code

If your PIN code is entered incorrectly three times in a row, Blocked appears in the display. You need to enter a PIN unblocking key (PUK1), which you can obtain from your service provider.

1. Press **\* \* 0+ 5\* \***.
2. Enter unblocking key. Enter the eight-digit PUK1 unblocking key, and then press **OK**. Your service provider supplies this code.
3. Enter a new PIN code, and then press **OK**.
4. Re-enter the new PIN code, and then press **OK**.

**Tip:** The message Blocked indicates that an incorrect PIN code was entered. The message **!** Blocked indicates that an incorrect PIN2 code was entered.

## Getting to Phone Setup...

1. Press **MENU** until you see *Phone Setup*, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by *Select?*.

## Managing Other Security Settings

Your phone includes other security features:

- a SIM card PIN2 code for accessing fixed dialing settings and other subscription-dependent features
- a security code controls access to security and other menu options

### Change the SIM Card PIN2 Code

Your SIM card PIN2 code is used to access fixed dialing settings. This four- to eight-digit code is issued to you when you subscribe to the feature. Use this feature to choose a new code.

1. Follow the steps in "Getting to Phone Setup..." to get to *Change SIM PIN2 Code*, and then press **OK** to select. You will see *Enter Old PIN2*.
2. Enter the current PIN2 code, and then press **OK**. You will see *Enter New PIN2*.
3. Enter new PIN2 code, and then press **OK**. You will see *Repeat New PIN*.
4. Re-enter the new PIN2 code, and then press **OK** again. You will see *Completed*.
5. Press and hold **C** to exit the menu.

**Tip:** You should have received your SIM card PIN2 code from your service provider.

## Getting to Phone Setup...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Unlock the PIN2 Code

If your PIN2 code is entered incorrectly three times in a row, **!** Blocked appears in the display. You need to enter a PIN2 unblocking key (PUK2), which you can obtain from your service provider.

1. Press **\* \* 0+ 5 JKL 2 ABC \***.
2. **Enter unblocking key.** Enter the eight-digit PUK2 unblocking key, and then press **OK**. Your service provider supplies this code.
3. **Enter a new PIN2 code**, and then press **OK**.
4. **Re-enter the new PIN2 code**, and then press **OK**.





### Change the Security Code


The security code is your phone's primary security number. You use it to reset your phone to its default settings and prevent access to your phone book. It is originally set to 000000.

1. **Follow the steps in "Getting to Phone Setup..."** to get to New Security Code, and then press **OK** to select. You will see Enter Security Code.
2. **Enter the current security code**, and then press **OK**. You will see Enter New Security Code.
3. **Enter a new security code**, and then press **OK**. You will see Secur. Code and the six-digit number selected.
4. **Press and hold C** to exit the menu.

## Activating Extended Menus

This feature activates and deactivates the extended menu. See “Personalizing the Options Menu” on page 160 to learn how extended menu can make your phone even simpler to use.

1. **Follow the steps in** “Getting to Phone Setup...” to get to Extended Menus, and then **press**  to select.
2. **Press**  to choose On or Off, and then **press** .
3. **Press and hold**  to exit the menu.

When extended menus are deactivated, you can activate them temporarily to access hidden features. Press and hold  to activate the extended menu temporarily. This shortcut displays all extended menu features until you exit the Options menu.

## Getting to Phone Setup...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### ***Managing Time and Date Settings***

#### ***View the Time and Date***

Use this feature to view the current time and date in one of two time zones.

**Note:** This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 137.







1. Follow the steps in "Getting to Phone Setup..." to get to Show Time and Date, and then press **OK** to select.
2. Press **MENU** to choose Show Home Time + Date or Show Away Time + Date, and then press **OK**. The selected time and date are displayed.
3. Press any key to clear the time and date from the display and return to the menu.
4. Press and hold **C** to exit the menu.



## ***Change the Time Displayed***

Use this feature to determine which time is displayed on your real time clock indicator.





**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

1. **Follow the steps in** “Getting to Phone Setup...” to get to Show Time and Date, and then **press**  to select.
2. **Press**  to scroll to Change Clock Display, and then **press** .
3. **Press**  to scroll to either Home Time or Away Time, and then **press**  to select.
4. **Press and hold**  to exit the menu.

## ***Set the Time Format***

You can choose a 12-hour or 24-hour time format.

**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

1. **Follow the steps in** “Getting to Phone Setup...” to get to Set Time Format, and then **press** .
2. **Press**  to choose either 12-hour or 24-hour, and then **press** .
3. **Press and hold**  to exit the menu.

## Getting to Phone Setup...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Set the Time and Date

To make it easy to check the local time when you travel, your phone can save the current time and date for two different time zones.

**Note:** This feature is available only when the extended menus are activated. See "Activating Extended Menus" on page 137.





**Tip:** The time displayed (home or away) on the real time clock indicator is the one you selected on page 139.


1. Follow the steps in "Getting to Phone Setup..." to get to Set Time and Date, and then press **OK** to select.
2. Press **MENU** to choose Set Home Time + Date or Set Away Time + Date, and then press **OK**. You will see Enter Home Time or Enter Away Time and the time currently set.
3. Press **OK** to accept the displayed time.  
or  
Enter the time in 24-hour format, and then press **OK**. You will see Enter Home Date or Enter Away Time and the date currently set.
4. Press **OK** to accept the displayed date. You will see Completed.  
or  
Enter the date in day(dd)-month(mm)-year(yy) form and then press **OK**. You will see Completed.
5. Press and hold **C** to exit the menu.



 

## Selecting the Display Language

Your phone contains 21 languages. Use this feature to select the language in which your phone displays menus and messages.

**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

1. **Follow the steps in** “Getting to Phone Setup...” **to get to Language Selection, and then press**  **to select.**
2. **Press**  **to scroll through the choices, and then press**  **to select the displayed option.**
3. **Press and hold**  **to exit the menu.**

If you accidentally change the language of your phone's display, press and hold the  key to return to the idle display, then press

    **to return directly to the language selection submenu.**

## Getting to Phone Setup...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below. You will see the feature name, followed by Select?.

### Turning Lights On and Off

You can activate or deactivate all phone lighting, including the phone status indicator, display backlighting, and keypad backlighting.

**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

1. Follow the steps in “Getting to Phone Setup...” to get to Lights, and then press **OK** to select.
2. Press **MENU** to choose On or Off, and then press **OK** to select the displayed option.
3. Press and hold **C** to exit the menu.

### Setting Keypad Tones

Choose the sounds your phone makes when its keys are pressed.

**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

1. Follow the steps in “Getting to Phone Setup...” to get to Select Keypad Tones, and then press **OK** to select.
2. Press **MENU** to choose Normal Tones, Single Tone, or No Tones, and then press **OK**.
3. Press and hold **C** to exit the menu.

## Getting to Phone Status...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to Phone Status, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

## Managing Phone Settings

### Review Your Phone's Settings

Use this feature to review all of your phone's settings that have changed from their original default settings.

To review all settings:

1. **Follow the steps in "Getting to Phone Status..."** to get to Status Review, and then press **OK**.
2. Press **MENU** to scroll through the list of all the menu items you have changed.
3. **Press and hold C** to exit the menu.



**Note:** You can reset your phone's original settings if desired. See "Reset Phone Options to Factory Defaults" on page 144.

## ***Reset Phone Options to Factory Defaults***

Use the master reset feature to reset all settings to their original default settings. This feature:

- resets audible call timers, the in-call timer, and the automatic lock
- resets extended menus to default setting
- restores keypad tones to normal, ringer tone to standard, and the volume level to the middle (fourth bar) of its range

To reset all settings:

1. **Follow the steps in** "Getting to Phone Status..." on page 145 to get to Master Reset, and then **press**  to select. You will see Enter Security Code.
2. **Enter your six-digit security code.** You will see Reset Complete.
3. **Press and hold**  to exit the menu.

**Tip:** *The factory default security code is 000000.*

## Getting to Phone Status...

1. Press **MENU** until you see Phone Setup, and then press **OK**.
2. Press **MENU** to scroll to Phone Status, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Clear All Stored Information***

The master clear feature resets the same items as master reset, plus the following:

- clear phone book entries from phone memory (not from SIM memory)
- clear last calls made and received lists
- reset resettable call timers



 
 


Master clear does not clear the:

- fixed dial list
- my number(s) list
- received messages list

 
To clear all settings:

1. **Follow the steps in "Getting to Phone Status..."** to get to Master Clear, and then press **OK** to select. You will see Enter Security Code.
2. **Enter your six-digit security code.** You will see Reset Complete.
3. **Press and hold C** to exit the menu.

**Tip:** The factory default security code is 000000.

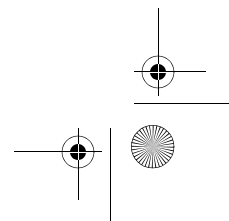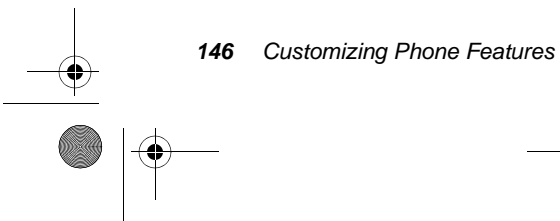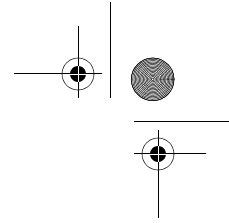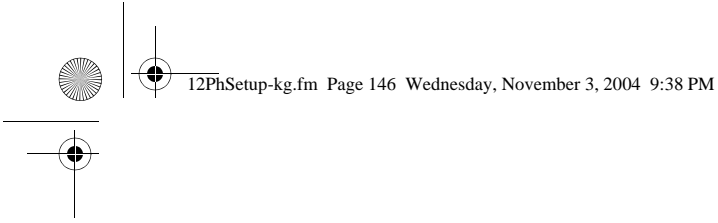










## ***Accessing the Network***

---

     This chapter shows you how to register with the Iridium satellite network.












## ***Network Selection Menu***

    **Network Selection**

● Register Now




## Getting to Network Selection...

1. Press  until you see *Network Selection*, and then press .
2. Press  to scroll to one of the features described below. You will see the feature name, followed by *Select?*.


## Registering With the Satellite Network

Use this feature to access Iridium satellite service. Your phone searches for the Iridium satellite network.

1. **Rotate and extend the antenna** upward. See "Holding the Phone" on page 40.
2. **Follow the steps in "Getting to Network Selection..."** to get to *Register Now*.
3. Press  to select. You will see *Registering....* This may take a few seconds.


 

 
 


If the phone finds the signal, you will see *Registered* and the signal strength indicator:

 


The  (home system) indicator also appears.

If the phone is unsuccessful you may see one of these messages: *Check Signal*, *Busy Try Later*, *Please Try Later*, or *Restricted Area*.

**Note:** You must wait three minutes between registration attempts.

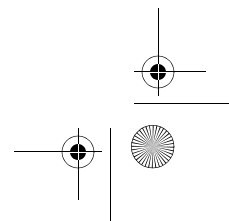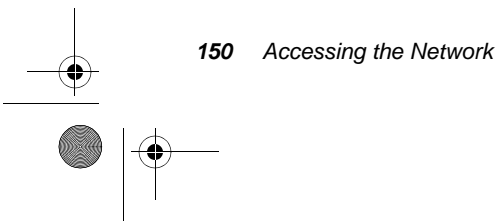

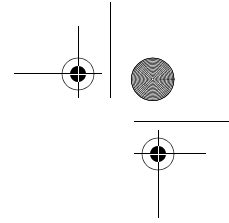
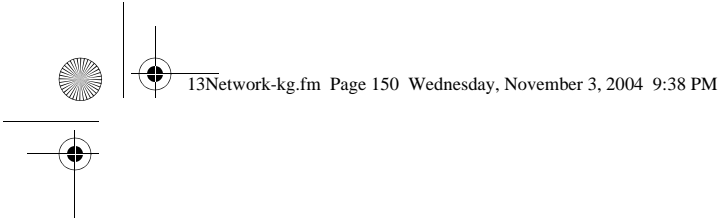




## ***Timing Your Calls***

---

    Your phone's call meters give you a variety of options for tracking the time you spend on the phone. You can monitor the length of individual calls, set a timer to track monthly usage, or have the phone alert you with tones at specific intervals.



## Call Meters Menu

### Call Meters

- Show Call Timers
  - Show Last Call
  - Total For All Calls
  - Reset All Timers
- Set Audible Call Timers
  - Single Alert Timer
    - On/Off
  - Repetitive Timer
    - On/Off
- Set In-Call Display
  - Show Time Per Call
  - No In-Call Display
- Lifetime Timer<sup>1</sup>

<sup>1</sup> This feature is available only when the extended menus are activated.

## Getting to Show Call Timers...

1. Press **MENU** until you see *Call Meters*, and then press **OK**.
2. Press **MENU** to scroll to *Show Call Timers*, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Showing Call Timers***

Call timers help you track your airtime. Keep a running tab of your monthly usage or view the airtime of your most recent call.

#### ***Show the Time of the Last Call***

Use this feature to display the elapsed time of your most recent call.

1. **Follow the steps in** "Getting to Show Call Timers..." **to get to** *Show Last Call*, and then press **OK** to select.

You will see the airtime of the most recent call in hours, minutes, and seconds. After several seconds, the display returns to *Show Last Call*.

2. **Press and hold** **C** to exit the menu.

**Note:** The last call timer shows elapsed time of the most recent call made since your phone was turned on. This information is not saved when you shut off the phone.

## Getting to Show Call Timers...

1. Press **MENU** until you see *Call Meters*, and then press **OK**.
2. Press **MENU** to scroll to *Show Call Timers*, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### **Show Total Time for All Calls**

Use this feature to display your total airtime since you last reset the Call Timer.

1. Follow the steps in "Getting to Show Call Timers..." to get to *Total For All Calls*, and then press **OK** to select.

You will see the airtime accumulated since the timer was last reset. The airtime is displayed in hours, minutes, and seconds. After several seconds, the display returns to *Total For All Calls*.

2. Press and hold **C** to exit the menu.

### **Reset All Timers**

Reset your timers at the beginning of each billing cycle to keep track of your spending.

1. Follow the steps in "Getting to Show Call Timers..." to get to *Reset All Timers*, and then press **OK** to select.

You will see *Completed*. The display then returns to *Reset All Timers*.

2. Press and hold **C** to exit the menu.

**Note:** This does not reset the Lifetime Timer described on page 158.



## Getting to Audible Call Timers...

1. Press **MENU** until you see *Call Meters*, and then press **OK**.
2. Press **MENU** to scroll to *Set Audible Call Timers*, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Setting Audible Call Timers***

Let your phone watch the clock for you. The call timers signal at a set time or interval with beeps only you can hear.

#### ***Set the Single Alert Timer***

Use this feature to set your phone to alert you after an elapsed time.

1. **Follow the steps in "Getting to Audible Call Timers..."** to get to *Single Alert Timer*, and then press **OK** to select.
2. Press **MENU** to scroll to *On* or *Off*, and then press **OK** to select.
  - If you select *On*, you will see *Enter Seconds*. Continue with **step 3**
  - If you select *Off*, you will see *Completed*. Continue with **step 4**
3. Press **OK** to accept the current setting. You will see *Seconds XXX*.  
  
or  
**Enter a number** from 11 to 999, and then press **OK**. You will see *Seconds XXX*.
4. Press and hold **C** to exit the menu.

## Getting to Audible Call Timers...

1. Press **MENU** until you see *Call Meters*, and then press **OK**.
2. Press **MENU** to scroll to *Set Audible Call Timers*, and then press **OK**.
3. Press **MENU** to scroll to one of the features described below.

### ***Set the Repetitive Timer***

Use this feature to set your phone to alert you at specific intervals, for example every 45 seconds.

1. **Follow the steps in "Getting to Audible Call Timers..."** to get to *Repetitive Timer*, and then press **OK** to select.
  2. Press **MENU** to scroll to *On* or *Off*, then press **OK** to select.
    - If you select *On*, you will see *Enter Seconds*. Continue with **step 3**
    - If you select *Off*, you will see *Completed*. Continue with **step 4**
  3. Press **OK** to accept the current setting. You will see *Seconds XXX*.
- or
- Enter a number** from 11 to 999, and then press **OK**. You will see *Seconds XXX*.
4. Press and hold **C** to exit the menu.

## Getting to Call Meters...




1. Press **MENU** until you see Call Meters, and then press **OK**.
2. Press **MENU** to scroll to one of the features described below.

### *Showing the In-Call Timer*

Use this feature to display a running clock of the airtime elapsed while on a call.

1. Follow the steps in "Getting to Call Meters..." to get to Set In-Call Display, and then press **OK** to select.
2. Press **MENU** to scroll to Show Time Per Call or No In-Call Display, and then press **OK** to select.
3. Press and hold **C** to exit the menu.

## Getting to Call Meters...


1. Press  until you see Call Meters, and then press .
2. Press  to scroll to one of the features described below.

### Showing the Lifetime Timer

Use this feature to show the total time of all calls for the life of your phone.

 
**Note:** This feature is available only when the extended menus are activated. See “Activating Extended Menus” on page 137.

**Tip:** *The lifetime timer can not be reset. The Reset All Timers feature has no effect on this timer.*

1. Follow the steps in “Getting to Call Meters...” to get to Lifetime Timer, and then press  to select.

You will see the total airtime of your phone since it was manufactured.





2. Press and hold  to exit the menu.



## ***Customizing the Menu System***

---

    This chapter shows you how to hide the menu features you don't use regularly, and how to add your favorite features to the Quick Access menu for instant recall.




## Personalizing the Options Menu







You can customize the Options menu by moving features in and out of the extended menus. Features that you place on the extended menu are hidden when extended menus are turned off, and become visible when you activate the extended menus.

**Note:** The default factory setting for your phone is extended menus activated.

### Move Menu Features

To move menu features:







1. **Find the feature** you want to move.
2. **Press and hold** . You will see one of two responses depending on where that menu feature is currently located. If you see:

Message	Description
Remove From Short Menu (The feature is in the short menu).	<b>Press</b>  to move the feature to the extended menu. You will see Menu Item Moved. <b>or</b> <b>Press</b>  to scroll to Leave in Short Menu, and then <b>press</b>  to select. You will see Move Cancelled.
Add To Short Menu (The feature is in the extended menu).	<b>Press</b>  to move the feature to the short menu. You will see Menu Item Moved. <b>or</b> <b>Press</b>  to scroll to Leave in Long Menu, and then <b>press</b>  to select. You will see Move Cancelled.

**Note:** Some features and submenus cannot be moved. You will see Cannot Move Menu Item.

## **Activate/Deactivate Extended Menus**

Use the Options menu to activate and deactivate extended menus. Activate them when you need access to every feature. Deactivate them for everyday use.

1. Press  until you see Phone Setup, and then press  to select.
2. Press  to scroll to Extended Menus, and then press  to select.
3. Press  to scroll to either On or Off, and then press  to select.

All hidden features are accessible when you activate the extended menus.

## **Access Hidden Features**



 






If you want to access a feature hidden in the extended menus, but don't want to leave the extended menus active, you can use this shortcut:

**Press and hold**  for a few seconds.





   
All extended menu features remain accessible until you exit the Options menu.

## Personalizing the Quick Access Menu

You can replace the default Quick Access menu features described on page 57 with any of the following features.

Icon	Quick Access Feature
	<b>Find by Location</b> recalls a Phone Book entry by its memory location number.
	<b>Add Entry to Phone</b> stores entered numbers in the next available phone memory location.
	<b>Add Entry to SIM</b> stores entered numbers in the next available SIM card location.
	<b>Ring Volume</b> displays and sets the incoming call ring tone volume.
	<b>Check Signal</b> checks the strength of the signal from the satellite network.
	<b>Switch Memory</b> switches one-touch dialing between the phone and SIM memories depending on the current setting.
	<b>Last Call Timer</b> displays the duration of your last call.
	<b>Show Services</b> displays a list of service phone numbers programmed by your service provider.
	<b>Mode Selection:</b> This feature is not currently supported.

To change a default quick access feature to one of the features listed above:


1. Press  and then press  to scroll to the feature you wish to change.
2. Press and hold  to access the list of features available.
3. Press  to scroll through the list until you find the desired feature.
4. Press  to store the displayed feature in the new location. You will see *Completed*.


















## Troubleshooting

   This chapter tells you what to do if you experience one of the following problems:

Problem	Solution
<b>You can't turn the phone's power on.</b>	<ul style="list-style-type: none"> <li>• Did you press and hold the <b>Ⓢ</b> key for three seconds to turn the phone's power on?</li> <li>• Check the battery. Is it charged, properly fitted, and are the contacts clean and dry?</li> </ul>
<b>You can't make calls.</b>	<ul style="list-style-type: none"> <li>• Check the antenna. Is it fully extended and rotated? Do you have a clear unobstructed view of the sky?</li> <li>• Did you enter the number in international format? All calls made from the Iridium satellite system must be in international format.</li> <li>• Check the signal strength indicator. If the signal is weak, ensure that you have a clear line of sight to the sky and there are no buildings, trees, etc. around.</li> <li>• Try to register manually.</li> <li>• Is <b>Restricted</b> displayed? Check the Call Barring setting.</li> <li>• Has a new SIM card been inserted? Check that no new restrictions have been imposed.</li> <li>• Check to see if your fixed dialing list is enabled. If so, you can only make calls to numbers or prefixes that are on the list.</li> </ul>
<b>You can't receive calls.</b>	<ul style="list-style-type: none"> <li>• Check to see that your phone is powered on.</li> <li>• Check the antenna. Is it fully extended and rotated? Do you have a clear unobstructed view of the sky?</li> <li>• Check the signal strength indicator. If the signal is weak, ensure that you have a clear line of sight to the sky and there are no buildings, trees, etc. around.</li> <li>• Check the Call Forwarding and Call Barring settings.</li> <li>• Check the Ringer setting. If it is off, there is no audible ringer.</li> </ul>
<b>You can't make international calls.</b>	<ul style="list-style-type: none"> <li>• Have you included the relevant codes? Press and hold the <b>0+</b> key to display the international dialing prefix (+) and then enter the appropriate country code followed by the phone number.</li> </ul>

Problem	Solution
<b>Your phone will not unlock.</b>	<ul style="list-style-type: none"> <li>• Have you inserted a new SIM card? Enter the new PIN code.</li> <li>• Enter the default phone unlock code —1234.</li> <li>• Have you forgotten the unlock code? Press <b>MENU</b> to change the unlock code (you need your security code).</li> </ul>
<b>Your PIN is blocked.</b>	Enter the PIN unblocking key (PUK1) or contact your service provider. See “Unblock the PIN Code” on page 134 for additional information.
<b>Your PIN2 is blocked.</b>	Enter the PIN2 unblocking key (PUK2) or contact your service provider. See “Unblock the PIN2 Code” on page 136 for additional information.
<b>Your SIM card will not work.</b>	<ul style="list-style-type: none"> <li>• Is the card inserted the correct way?</li> <li>• Is the card visibly damaged or scratched? Return the card to your service provider.</li> <li>• Check the SIM and phone contacts. If they are dirty, clean them with an antistatic cloth.</li> </ul>
<b>You can't cancel Call Forwarding or Call Barring.</b>	Wait until you are in an area with good network coverage and try again.
<b>The  (message) indicator is flashing.</b>	There is not enough memory available to store another message. Use the Messages menu to delete one or more messages.
<b>The battery won't charge.</b>	<ul style="list-style-type: none"> <li>• Check the charger. Is it properly connected? Are its contacts clean and dry?</li> <li>• Check the battery contacts. Are they clean and dry?</li> <li>• Check the battery temperature. If it is warm, let it cool before recharging.</li> <li>• Is it an old battery? Battery performance declines after several years of use. Replace the battery.</li> <li>• Make sure you have a Iridium approved battery installed. If you see <i>Invalid Batt.</i> in the display, you will not be able to charge this battery.</li> </ul>

Problem	Solution
<b>The battery drains faster than normal.</b>	<ul style="list-style-type: none"> <li>• Are you in an area of variable coverage? This uses extra battery power.</li> <li>• Is your antenna fully rotated and extended? Do you have a clear unobstructed view of the sky? This helps use less battery power.</li> <li>• Is it a new battery? A new battery needs two to three charge/discharge cycles to attain normal performance.</li> <li>• Is it an old battery? Battery performance declines after several years of use. Replace the battery.</li> <li>• Is it a battery that hasn't been completely discharged? Allow the battery to fully discharge (until the phone turns itself off) and then charge the battery overnight.</li> <li>• Are you using your phone in extreme temperatures? At extreme hot or cold temperatures, battery performance is significantly reduced.</li> </ul>
<b>You find your phone becoming warm during use.</b>	You may notice this during long calls or during charging. The heat is produced by the electronic components within your phone and is quite normal.
<b>Phone is not responding to user controls including the power key.</b>	Remove the battery from the phone and then reattach it to cycle power and reset.
<b>Your SIM card is inserted in the phone but the display says:</b>	<ul style="list-style-type: none"> <li>• <b>Check Card or Insert Card</b> Check that the SIM card has been inserted correctly. The contacts of the SIM card may be dirty. Turn the phone off, remove the SIM card and rub the contacts with a clean cloth. Replace the card in the phone.</li> <li>• <b>Blocked or  Blocked</b> Enter the PIN unblocking key (PUK1) or the PIN2 unblocking key (PUK2) respectively, or contact your service provider. See "Unblock the PIN Code" on page 134 and "Unblock the PIN2 Code" on page 136 for additional information.</li> <li>• <b>Bad Card See Supplier</b> Please contact your service provider.</li> </ul>
<b>You find your phone's prompts in a language other than your own.</b>	<ol style="list-style-type: none"> <li>1. <b>Press and hold</b> the  key to return to the idle display</li> <li>2. <b>Press</b>     to go directly to the language selection submenu</li> <li>3. <b>Press</b>  until you see your preferred language</li> <li>4. <b>Press</b>  to select</li> </ol>

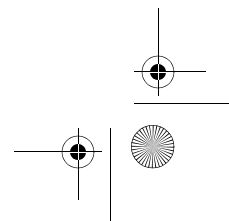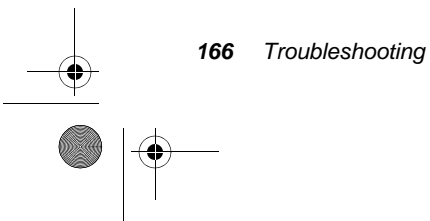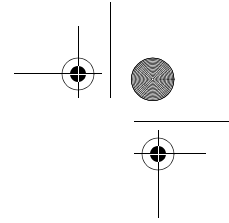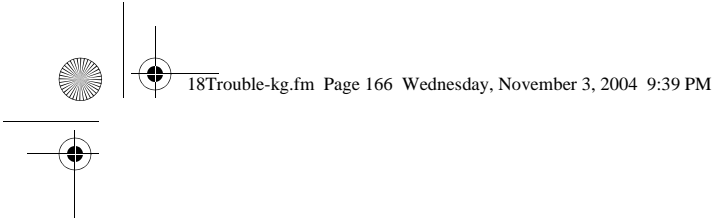

## Index

---

### Symbols

- \* character 44
- + character 44
- ▣ character 44, 67

### A

- AC travel charger 22
- accessories 21–24
- accessory connector
  - defined 17
  - illustration 15
- adapter
  - antenna 24
  - auto accessory 23
- Add To Short Menus message 160
- airbag 11
- alert, incoming call 46
- alphanumeric keypad 15
- antenna
  - adapter 24
  - attaching 26
  - care 8
  - detents 40
  - extending 40
  - illustration 40
  - lock release button 15, 17, 26
  - removing 26
  - rotating 40
- audible call timers
  - repetitive 156
  - resetting default settings 144
  - single alert 155
- auto accessory adapter 23, 33–34
- automatic lock
  - resetting default 144
  - setting 131
- automatic redial 43

### B

- Bad Card See Supplier message 40, 165
- barring calls
  - incoming 97
  - outgoing 96
- battery
  - cautions 9, 36
  - charge indicator
    - defined 19
    - displayed 33, 35
    - illustration 15
  - charge meter 57, 100
  - charging 33–??
  - Charging Battery message 33, 100
  - compartment illustration 31
  - disposal 36
  - Fast Charge Completed message 100
  - installing 30
  - internal charger 33–34
  - Invalid Batt. message 100
  - Low Battery message 35
  - power level, checking 100
  - removing 31–32
  - standby time 21
  - talk time 21
  - troubleshooting 164, 165
- Blocked message 40, 134, 165
- !** Blocked message 40, 136, 165
- Busy Try Later message 43, 55, 149

### C

- call
  - answering 45–47
  - automatic redial 43

- barring
  - incoming 97
  - outgoing 96
- dialing special characters 44
- ending 45, 47
- incoming call alert 46
- international call
  - dialing + character 44
- last ten calls 80
- muting 52
- placing 42–45
- receiving 45–47
- redialing last number 43
- unable to make call 163
- unable to make international call 163
- unable to receive call 163
- Call Answer? 45, 46
- call barring
  - barr password
    - changing 99
    - entering 96–99
  - cancelling 98
  - incoming calls 97
  - outgoing calls 96
  - unable to cancel 164
- Call Failed message 46, 47
- call forwarding
  - all calls 90–91
  - cancelling 94
  - from Quick Access menu 57
  - unable to cancel 164
  - voice calls 92–93
  - when unavailable 89
- Call Meters menu
  - diagram 152
  - Lifetime Timer feature 158
  - Repetitive Timer feature 156
  - Reset All Timers feature 154
  - Set Audible Call Timers feature 155–156
  - Show Call Timers feature 153–154
- Show In-Call Display feature 157
- Show Last Call feature 153
- Single Alert Timer feature 155
- Total For All Calls feature 154
- call meters. *See* call timers
- Call Related Features menu
  - Call Barring feature 95–99
    - Bar Incoming Calls 97
    - Bar Outgoing Calls 96
    - Cancel All Barring 98
    - Change Bar Password 99
  - Call Forwarding feature 89–94
    - Cancel All Forwarding 94
    - Detailed Forwarding 92–93
    - Forward All Calls 90–91
    - Forward When Unavailable 89
- diagram 88
- Pending Call Drop feature 102
- Show Battery Meter feature 100
- Show Signal Strength feature 101
- call timers
  - all calls 154
  - elapsed airtime 157
  - in-call timer 157
  - lifetime timer 158
  - most recent call 153, 162
  - repetitive 156
  - resetting all 145, 154
  - single alert 155
  - total airtime 154
- Call? 42
- Callings message 42
- Cannot Move Menu Item message 160
- carry case 24
- charger, AC travel 22
- Charging Battery message 33, 100
- Check Card message 39, 165
- check mark indicator

defined 20  
 Check Signal message 39, 149  
 Checking Signal... message 101  
 clear key, defined 16  
 clearing stored information 145  
 clear-line-of-sight 16  
 clock 15, 19  
 code  
   phone unlock 131–132  
   security 74, 132, 136, 144, 145  
   SIM card PIN 39, 133–134  
   SIM card PIN2 75–78, 135–136  
 Completed message 55  
 Connected message 42, 45, 46

## D

date  
   setting 140  
   viewing 138  
 default settings, resetting 144  
 detents, antenna 40  
 dialing  
   ☐ 44  
   \* character 44  
   † character 44  
   ▣ character 44, 67  
   last ten calls 80  
   number with pauses 68  
   Phone Book entry 72  
   phone number 42  
   PIN numbers 44  
   special characters 44  
   supplementary service numbers 44  
 display  
   backlighting 142  
   cold temperatures and 17  
   icons 57, 162  
   illustration 15  
   indicators 15  
   language, selecting 141  
   special characters 44  
   standby mode 41

status indicators 19–20  
 wrong language displayed 165

## E

earpiece  
   adjusting volume 48  
   illustration 15  
 Edit a Stored Message 120  
 elapsed airtime timer 157  
 End Call? 42  
 Enter Name message 55  
 Enter Phone Unlock Code message 39, 132  
 Enter PIN message 39, 55, 133  
 Enter PIN2 message 75–78  
 exiting menus and menu features 54  
 extended menus  
   activating 137, 161  
   Call Barring 95  
   deactivating 137, 161  
   default setting 160  
   defined 160  
   Detailed Call Forwarding 92  
   Language Selection 141  
   Lifetime Timer 158  
   Lights 142  
   moving menu features 160  
   Select Keypad Tones 142  
   Set Time and Date 140  
   Set Time Format 139  
   Show Time and Date 138, 139

## F

Failed message 55  
 Fast Charge Completed message 100  
 fixed dial list  
   defined 75  
   entry  
     adding 76  
     editing 78  
     erasing 77  
   one-touch dialing 83

viewing 79  
fixed dialing  
  activating 75  
  PIN2 code 135  
  viewing fixed dial list 79  
forwarding calls  
  all calls 90–91  
  cancelling 94  
  from Quick Access menu 57  
  voice calls 92–93  
  when unavailable 89

## H

headset 23  
headset jack 15, 17, 23  
home system indicator  
  defined 19  
  displayed 38, 149  
hourglass icon  
  defined 20  
  displayed 55

## I

icons  
  hourglass 55  
  Quick Access menu 20, 57, 162  
in use indicator 20  
In-Call feature  
  muting a call 52  
in-call timer  
  defined 157  
  resetting 144  
incoming call alert 46  
indicators  
  battery charge 15, 19, 33, 35  
  check mark 20  
  display 15, 19–20  
  home system 19, 38, 149  
  hourglass icon 20, 55  
  in use 20  
  message 19, 106, 117, 164  
  no service 20, 38  
  Quick Access menu icons 20

170

real time clock 19  
satellite mode 19  
scroll bar 20, 55  
signal strength 15, 19, 101, 149  
  status 15, 18, 19–20  
Insert Card message 39, 165  
international call  
  dialing + character 44  
  unable to make 163  
Invalid Account message 39  
Invalid Batt. message 100  
Iridium Call Attempt message 46

## K

key presses 14  
keypad  
  keypad tones, setting 142  
  locking 48  
  resetting default tones 144  
  unlocking 48  
keys  
  alphanumeric keypad 15  
  clear 16  
  keypad tones, setting 142  
  locking the keypad 48  
  memory recall 16, 49, 71, 81  
  memory store 16, 64, 80  
  menu 16  
  menu system, navigating 54  
  message 15, 16, 105–125  
  OK 16  
  power 16  
  quick access 15, 16, 49, 56, 129  
  scroll 16  
  unlocking the keypad 48  
  volume control 15, 16, 48, 49, 129

## L

language  
  selecting 141  
  wrong language displayed 165



last call timer  
 displaying 153, 162

last ten calls  
 clearing 145  
 placing a call 80

LCD. *See* Liquid Crystal Display

Leave in Long Menus message 160

Leave in Short Menus message 160

lifetime timer 158

Liquid Crystal Display  
 cold temperatures and 17  
 status indicators 19–20

locking the keypad 48

locking the phone  
 automatically 131  
 from Quick Access menu 57  
 instantly 131  
*see also* unlocking the phone

Low Battery message 35

## M

making a call 42–45

master clear 145

master reset 144

memory  
 phone 61, 63, 64  
 SIM card 61, 63, 64

memory recall key 16, 49, 71, 81

memory store key 16, 64, 80

menu  
 Add To Short Menus message 160  
 call meters 151–158  
 call related features 87–102  
 Cannot Move Menu Item message 160  
 customizing 159–162  
 defined 53  
 exiting 54  
 feature selection messages 55  
 indicators 55  
 Leave in Long Menus message 160

Leave in Short Menus message 160

Menu Item Moved message 160

Messages 103–125

Move Cancelled message 160

Network Selection 147–149

Phone Book 59–85

Phone Setup 127–145

questions 55

Remove From Short Menus message 160

scrolling 54, 56  
 using 53–??

Menu Item Moved message 160

menu key 16

message editor 113–117

Message Failed Resend? 117, 120

message indicator  
 defined 19  
 displayed 106  
 flashing 19, 106, 117, 164

message key  
 defined 16  
 illustration 15  
 using 105–125

Message Read Now? 106, 108

Message Sent message 117, 119

messages  
 contents 107  
 creating 114  
 deleting 110, 121  
 editing 116  
 feature selection indications 55  
 go to next message 110, 119  
 message key 105–125  
 notification  
 incoming voicemail 108  
 received message(s) 106

phone 14

reading  
 from Quick Access menu 57  
 incoming 108  
 stored 109  
 received 47, 108–112

sending 113–121  
    voicemail 108  
Messages menu  
    Call Voicemail feature 105  
    diagram 104  
    enter service centre number  
        120, 123  
    Message Editor feature 113–  
        117  
    Message Settings feature 122–  
        125  
    Outgoing Messages feature  
        118–121  
    Received Messages feature  
        109–112  
    Voicemail Number feature 122  
microphone 15  
Move Cancelled message 160  
multiple-key answer 45, 46  
Mute message 52  
muting a call 52, 57

## N

network  
    satellite, registering 57, 149  
network features  
    call barring 95–99  
    call forwarding 89–94  
Network Selection menu  
    diagram 148  
    Register Now feature 149  
No Number Available message 105  
No Service Center message 117,  
    120  
no service indicator  
    defined 20  
    displayed 38

## O


OK key 16  
one-touch dialing  
    frequently called numbers 61  
    switching memory, from Quick  
        Access menu 162

    using 83  
Options menu  
    customizing 160–161  
    defined 53  
    entering 54  
    exiting 54  
    using 54–55  
Overwrite? 64

## P

password, call barring 96–99  
patent information 179  
pause dialing 44, 67–68  
pauses in numbers, entering 67  
pending call drop signal 102  
Personal Identification Number  
    code 133  
    See *also* PIN code  
personal mailbox 47, 107  
phone  
    becomes warm during use 165  
    features, customizing 127–145  
    holding 40  
    illustration 15  
    locking  
        automatically 131  
        from Quick Access menu 57  
        instantly 131  
    messages at power-on 39  
    security code, default 132  
    service phone numbers 85,  
        162  
    settings  
        clearing 145  
        resetting default 144  
        viewing 143  
    turning on and off 38  
    unable to make call 163  
    unable to make international  
        call 163  
    unable to receive call 163  
    unable to turn on 163  
    unable to unlock 164  
    unblocking the PIN code 134

- unlocking the PIN2 code 136
- unlock code
  - changing 132
  - default 131
  - entering 131
- unlocking 131
- use while driving 9
- use with other electronic devices 10–11
- Phone Book
  - adding an entry 63–66
  - capacity, checking 73
  - characters, entering 65–66
  - entries
    - clearing all 145
    - scrolling through 48, 70
  - entry
    - adding 63–66, 162
    - calling 72
    - changing 69
    - correcting 65
    - erasing 72
    - locating 70–71
    - modifying 72
  - find entry by location 71, 162
  - find entry by name 57, 70
  - fixed dial list
    - adding an entry 76
    - editing an entry 78
    - erasing an entry 77
  - fixed dialing
    - activating 75
    - viewing fixed dial list 79
  - last ten calls 80
  - memory recall key 71
  - memory store key 64
  - menu diagram 60
  - name
    - entering 65–66
    - storing 63–66
  - number
    - calling 72
    - entering 63–64
    - storing 63–66
  - one-touch dialing 83
  - organizing 61
  - pauses in numbers
    - dialing 68
    - entering 67
  - phone memory 61
  - phone numbers
    - grouping 62
    - security issues 62
    - storing 61
  - prefixes, using 69
  - preventing access 74
  - Restricted message 74
  - SIM card memory 61
  - storage capacities 61
- Phone Book menu
  - Add Entry feature 63–66
  - Call Number feature 72
  - Check Capacity feature 73
  - diagram 60
  - Erase Name And Number feature 72
  - Find Entry By Location feature 71
  - Find Entry By Name feature 70
  - Modify Name Or Number feature 72
  - My Phone Number(s) feature 81–82
  - One-Touch Dial Setting feature 83
  - Prevent Access feature 74
  - Setup Fixed Dialing feature
    - activating 75
    - Add Entry 76
    - Edit Entry 78
    - Erase Entry 77
    - Last Ten Calls 80
    - View Fixed Dial List 79
  - Show Services feature 85
- phone memory
  - checking capacity 73
  - entries, clearing all 145
  - one-touch dialing 83

- storage capacities 61
- phone number
  - dialing 42
  - modifying on SIM card 82
  - programming on SIM card 82
  - using pauses in 67
  - using prefixes 69
  - viewing your own 81
- phone settings
  - clearing 145
  - resetting default 144
  - viewing 143
- Phone Setup menu
  - Adjust Ring Volume feature 129
  - Automatic Lock feature 131
  - Change Clock feature 139
  - Change SIM Card PIN feature 134
  - Change SIM Card PIN2 feature 135
  - Change Unlock Code feature 132
  - diagram 128
  - Extended Menus feature 137, 161
  - Language Selection feature 141
  - Lock Now feature 131
  - Master Clear feature 145
  - Master Reset feature 144
  - New Security Code feature 136
  - Phone Lock feature 131–132
  - Phone Status feature 143–145
  - Require SIM Card PIN feature 133–134
  - Ring or Vibrate feature 130
  - Select Keypad Tones feature 142
  - Set Ringer Tone feature 130
  - Set Time and Date feature 140
  - Set Time Format feature 139
  - Show Time and Date feature 138
  - Status Review feature 143
- phone unlock code
  - changing 132
  - default 131
  - entering 131
- PIN code
  - activating 133
  - Blocked message 40, 134, 165
  - changing 134
  - deactivating 133
  - defined 133
  - Enter PIN message 39, 133
  - entering 39, 133–134
  - incorrect entry 134
  - unlocking 134
- PIN unblocking key (PUK1)
  - defined 134
  - entering 134
- PIN2 code
  -  Blocked message 40, 136, 165
  - changing 135
  - defined 135
  - Enter PIN2 message 75–78
  - entering 75–78
  - incorrect entry 136
  - unlocking 136
- PIN2 unblocking key (PUK2)
  - defined 136
  - entering 136
- placing a call 42–45
- Please Try Later message 43, 149
- postscripting 69
- power
  - checking power level 100
  - power-on messages 39
  - turning phone on and off 38
  - unable to turn on phone 163
- power connector
  - defined 17
  - illustration 15

power key  
     defined 16  
     illustration 16  
     using 28, 33, 34, 38  
 prefixes 69  
 prompts, defined 14  
 PUK1. See PIN unblocking key  
 PUK2. See PIN2 unblocking key

## Q

quick access key  
     defined 16  
     illustration 15  
     ringer volume, adjusting 49,  
     129  
     using 56  
 Quick Access menu  
     customizing 162  
     default settings 57  
     defined 56  
     icons 20, 57, 162  
     quick access key 56  
     replacing features 162  
     using 56–57  
 Quit? 55


## R

Range XXX-XX message 64  
 real time clock 19  
 receiving a call 45–47  
 receiving messages 47  
 redial  
     automatic 43  
     last number 43  
 Redial Failed message 43  
 Redial? 43  
 Registered message 149  
 registering  
     from Quick Access menu 57  
     satellite network 149  
 Registering... message 39, 42,  
 149  
 Remove From Short Menus message  
 160

repetitive timer  
     defined 156  
     resetting default setting 144  
     setting 156  
 Restricted Area message 43, 149  
 Restricted message 74  
 restricting calls 95–99  
 restricting phone use 75–79  
 restricting SIM card access 75  
 ringer  
     activating 130  
     adjusting volume 49, 129, 162  
     deactivating 130  
     resetting default tone 144  
     setting tone 130  
     wakeup tone 38  
 Rotate and Extend Antenna  
     message 149  
 Rotate Antenna Call Attempt  
     message 46  
 Rotate Antenna Registering...  
     message 39

## S

safety information 7–??, 8–11  
 satellite antenna  
     illustration 40  
     lock release button 15, 17  
 satellite mode  
     muting a call 52  
 satellite mode indicator  
     defined 19  
 satellite network, registering 57,  
 149  
 scroll bar  
     defined 20  
     displayed 55  
 scroll key 16  
 scrolling 54, 56  
 Searching... message 39  
 security code  
     changing 136  
     default 74, 132, 136  
     defined 136

- entering 74, 132, 136, 144, 145
  - security features 133–136
  - Select? 55
  - service phone numbers 85, 162
  - short menus 160
  - signal strength indicator
    - defined 19
    - illustration 15
    - satellite network registration and 149
    - viewing 101, 162
  - SIM card
    - Bad Card See Supplier message 40, 165
    - Blocked message 40, 134, 165
      -  Blocked message 40, 136, 165
    - Check Card message 39, 165
      - defined 27
      - display messages 165
      - fixed dial list 75
      - Insert Card message 39, 165
    - inserting 28
    - phone number
      - entering 82
      - modifying 82
      - security issues 62
      - viewing your own 49, 81
    - PIN code
      - activating 133
      - changing 134
      - deactivating 133
      - defined 133
      - Enter PIN message 39, 133
      - entering 39, 133–134
      - incorrect entry 134
      - unblocking 134
    - PIN2 code
      - changing 135
      - defined 135
      - Enter PIN2 message 75–78
      - entering 75–78
      - incorrect entry 136
      - unblocking 136
    - precautions 27, 28
    - protecting 133–134
    - removing 29
    - restricting access 75
    - security features 133–136
    - storing messages
      - outgoing 117
      - received 108
    - troubleshooting 164, 165
  - SIM card memory
    - checking capacity 73
    - one-touch dialing 83
    - storage capacities 61
  - single alert timer
    - resetting default setting 144
    - setting 155
  - special characters 44
  - standby mode 41
  - standby time, battery 21
  - status indicator
    - defined 18
    - display 19–20
    - illustration 15
  - status indicators 15
  - Stored to Outgoing message 117
  - Stored XXX message 64
  - submenus, defined 53
  - supplementary service numbers 44
- T**
- talk time, battery 21
  - time
    - away time, defined 140
    - changing clock display 139
    - home time, defined 140
    - setting 140
    - setting format 139
    - viewing 138
  - timers
    - all calls 154
    - elapsed airtime 157
    - in-call timer 157
    - lifetime timer 158

most recent call 153, 162  
repetitive 156  
resetting all 154  
single alert 155  
total airtime 154  
total airtime timer 154  
travel charger 33–34  
troubleshooting 163–165

## U

Unanswered Call message 47  
unanswered calls 47  
unlocking  
    SIM card PIN code 134  
    SIM card PIN2 code 136  
unlock code  
    changing 132  
    default 131  
    entering 131  
unlocking the keypad 48  
unlocking the phone 131  
    *See also* locking the phone


 

 
 


## V

VibraCall alert function  
    activating 57, 130  
    deactivating 130  
    phone power-on and 38  
vibration mode. *See* VibraCall  
    alert function  
View Options? 55  
voicemail  
    call forwarding when  
        unavailable 89  
    checking 57, 105  
    detailed call forwarding 92–93  
    forward all calls 90–91  
    No Number Available message  
        105  
    notification message 106, 108  
    storing voicemail number 122  
volume  
    control keys 16  
    control keys illustration 15

earpiece, adjusting 48  
    resetting default 144  
ringer, adjusting 49, 129, 162  
volume level display 48

## W

wakeup screen 38  
warranty information 181–184  
wrist strap 23

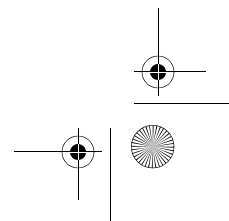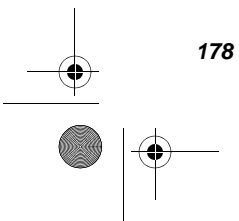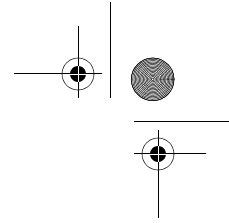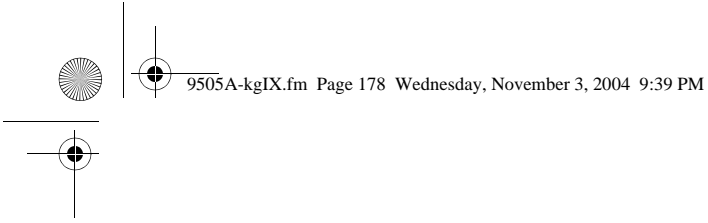



## Patent Information

Manufactured under one or more of the following U.S. patents:

4121218	4616314	4741034	D306594	5083304	D337332	D354062	D368696
4138681	4617520	4742562	4912602	D324024	5230007	5384825	5510693
4193036	D286778	D295627	4918732	D324388	5230093	D356084	5511235
4254382	4626309	4746242	4922178	5095503	5233633	5402447	D369162
4302845	4628529	D295973	4945570	D325028	5235492	5406146	5513078
4312074	4629829	D295975	4954796	D325583	5237257	5406562	D369359
4327319	4630304	4751737	4959851	5109536	5239127	D357224	5519303
4329666	4630305	D296187	4963812	D325915	5241545	D357457	5519346
4369516	4633141	4761621	4963843	5113436	5241548	5410741	5524276
4369522	4636593	4764737	4965537	5117450	5241650	D357680	5524278
4378603	4636741	D297734	4972355	5121047	5241693	D357681	D370463
4390963	D288432	D297735	4972432	5122480	5242767	5428836	5530922
D269873	4648125	4777564	4972455	5122722	D339582	D359734	5542116
4398265	4649543	Re.32768	4975808	D327061	5249302	D359735	5544250
4400584	D288683	D299136	4984290	5128834	5251331	D359959	D372481
4400585	4654655	4797929	D314173	D328302	D340710	5432017	5546275
D270835	D289156	4798975	D315330	5142551	5260988	D360632	5546380
D271491	4662691	4800348	D315346	5142696	5261119	5438684	D372896
Re.31470	4667333	4802236	D315543	5146620	5262710	D361070	5551078
4431977	4668917	4809356	D315559	5148471	5263052	5442680	5559471
4434461	4670747	4811377	D315565	5148473	5276707	5446763	D374424
4455534	4672502	4811404	5004992	5148961	5278994	5448763	D374872
4462098	4680787	4827226	D315907	5150359	D343173	5448771	5572193
D275951	4681476	4827507	5008925	5150384	5280637	5453997	5574976
4484153	4683585	4829274	D316417	5152006	D344087	D362840	5577268
4485486	4692726	4837534	D316859	5157693	5287553	5457744	D375732
4486624	4704588	D301476	5017856	5163159	5287555	5459640	D375733
D276809	D292578	4843621	5018188	5164652	5287556	5463646	D375734
4491972	4706036	4845772	5020091	5166596	D344511	5465412	D375932
D277667	D292920	D302015	5020092	5175759	5301365	5469177	D375952
4504834	4710724	4851966	5020093	5175874	5321847	5475752	D376127
D278708	4711361	4868576	5028083	D332261	D348880	D365094	5588041
4523155	4715063	4870686	5028859	5182749	5349588	D365817	5589796
4546329	4716319	D303656	5029044	D332785	5359696	5486843	5590177
4550426	4716391	4876552	5029233	5185566	5361400	5487184	5594778
4551696	4723305	4879533	5031028	5187809	5363071	5488335	5594951
4564821	D294257	D305427	5036532	5193223	5365549	5488649	D377792
D282169	4727306	4896124	5053924	5195106	D352497	D366872	D377934
4571595	4727583	4897873	5057762	5195108	5366826	5493198	5604050
4573017	4730195	D305717	D320780	5201069	D353131	5493714	5606730
4574243	4734635	4904549	5059885	5204977	D353361	5497126	D378366
4585957	4736277	4905288	5060294	5210793	5375143	5497382	5613229
4602218	4737976	4905301	D322783	5214675	5375258	D367640	5613863
D284759	4740794	D306293	D322955	5222104	5379324	5499394	5615233
D285439	4741018	D306441	5081674	5222251	D354055	5506490	5621763

Other patents pending.

E C Directive

**Declaration of Conformity**

This is to certify that the following equipment complies with all relevant Essential Health and Safety Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC and the Low Voltage Directive 73/23/EC as amended by 93/68/EC.

<b>Equipment description</b>	Iridium 9505A Satellite Handset
<b>Manufacturer</b>	Celestica, 1615 East Washington Street, Mount Pleasant, IA 52641, USA
<b>Issue date</b>	03 November 2004

The following harmonised standards have been applied to the design of the handset:

Standard	Description	Test Report
EN 60950-1:2001	Information technology equipment - Safety - Part General requirements	SU2735/5835 28 <sup>th</sup> October 2004
EN 301 489-20V1.2.1 (2002 11) EN 301 489-01V1.4.1 (2002-08)	Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services.	EU2165/5748 7 <sup>th</sup> October 2004
ETSI EN 50361:2001	Basic standard for the measurement of specific absorption rate related to human exposure to electromagnetic fields from mobile phones (300 MHz - 3 GHz)	EU2165/5748 7 <sup>th</sup> October 2004
ETSI EN 50360:2001	Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300MHz to 3GHz)	M040920-1 8 <sup>th</sup> October 2004
ETSI EN 301 441 V1.1. 05/2000	Satellite Earth Stations and Systems (SES); Harmonised EN for Mobile Earth Stations MESs)	RU1125/5753 8 <sup>th</sup> October 2004

A "technical file" is retained by Iridium Satellite LLC.

The 9505A handset is declared conformant only if it is used with the Iridium accessories and antenna approved for the 9505A model and if the handset is used as described in the 9505A User Guide.

<b>Signed</b>	<i>[Signature]</i>	CTO, Iridium Satellite, LLC
<b>Date</b>	11/10/2004	

## **Warranty Information**

---

### ***Iridium Limited Warranty For Satellite Subscriber Radiotelephone Products***

#### **1. Coverage and Duration**

Iridium warrants that its new satellite subscriber radiotelephone products and accessories (the "Product") shall be free from defects in materials and workmanship for a period of twelve (12) months from the date such Product is delivered to the first end-user purchaser or first lessee (the "Purchaser"), or the date such Products are first placed into satellite subscriber service, whichever occurs earliest.

 
Iridium, at its option, shall at no charge to Purchaser, either repair or replace the Product, or refund the purchase price of a Product that does not conform to this warranty, provided the Product is returned in accordance with the instructions set out below and within the warranty period. These remedies are Purchaser's exclusive remedies under this warranty. Repair may include the replacement of parts or boards with functionally equivalent reconditioned or new parts or boards. A Product that has been repaired or replaced is warranted for the balance of the original warranty period. A Product for which a replacement has been provided shall become Iridium's property.

This warranty is made by Iridium to the Purchaser of the Products only, and it is not assignable or transferable by the Purchaser. This is Iridium's sole and complete warranty for the Products. Iridium assumes no obligation or liability for additions or modifications to this warranty unless made in writing and signed by an officer of Iridium. Iridium does not warrant any installation, maintenance, or service of the Products not performed by Iridium.



**This Product is covered by a U.S.A. warranty.** If the Product has been sold outside of the U.S.A., Iridium will honor the U.S.A. warranty terms and conditions only. Outside of the U.S.A., any different warranty terms, liabilities and/or legal requirements of the country in which the Product is sold are specifically disclaimed by Iridium.

#### **2. Conditions Not Covered By This Warranty**

- a. Products that are integrated, installed, maintained, or serviced in any manner other than in accordance with the Iridium user documentation furnished with or applicable to the Product.
- b. Product damage caused by the use of ancillary equipment not furnished by Iridium, including accessories and peripherals.





- c. Problems where the Product is used in a combination with ancillary equipment not furnished by Iridium, and it is determined by Iridium there is no fault with the Product.
- d. Ancillary equipment not furnished by Iridium which is attached to or used in connection with the Products is not the responsibility of Iridium, and all such equipment is expressly excluded from this warranty. Furthermore, Iridium does not warrant the integrated operation of the combination of the Products with any ancillary equipment not furnished by Iridium.
- e. Defects or damage resulting from: use of the Product in any manner not normal or customary; misuse, accident or neglect including but not limited to dropping the Product onto hard surfaces, immersion in or exposure to water, rain or extreme humidity, immersion in or exposure to sand, dirt or other particulates, exposure to extreme heat, spills of food or liquid; improper testing, operation, maintenance, installation, adjustment; or any alteration or modification of any kind.
- f. Batteries manufactured by Iridium and sold with Products whose capacity exceeds 80% of rated capacity are not covered. Batteries whose capacity falls below 80% of rated capacity, or that develop leakage, shall be considered non-conforming. This warranty is voided for batteries if: a) such batteries are charged by other than the Iridium-approved battery charger specified for charging such batteries; b) any seals on such batteries are broken or show evidence of tampering; or c) such batteries are used in equipment other than the Product for which they are specified; or d) such batteries are charged and stored at temperatures greater than 60 degrees centigrade.
- g. Breakage or damage to antennas, or scratches or other damage to plastic surfaces or other externally exposed parts caused by Purchaser's use.
- h. Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- i. Products on which serial numbers or date tags have been removed, altered or obliterated.
- j. Coil cords that are stretched or on which the modular tab is broken; leather cases, which are covered under separate manufacturers' warranties;
- k. Products rented on a month-to-month basis.
- l. Normal wear and tear.

  

### **3. Obtaining Warranty Service**

For warranty questions, repairs, or for the return of Product, **please call your Service Provider or Point-of-Sale, not Iridium.** Equipment needing service should be returned to your **Service Provider or Point-of-Sale, not Iridium.**

  SERVICE WORK PERFORMED BY SERVICE CENTERS NOT AUTHORIZED BY IRIDIUM TO PERFORM SUCH WORK WILL VOID THIS WARRANTY.



All Products shipped to Iridium's authorized Warranty Service Center must be shipped with freight and insurance prepaid. Purchaser must include with the Product a bill of sale, a lease, or some other comparable proof of purchase, the name and location of the installation facility, if any, and most importantly, the Purchaser's name, address, and telephone number and a written description of the problem. Product that is repaired or replaced under this warranty shall be returned to Purchaser at Iridium's expense for the freight and insurance, and at Purchaser's expense for any applicable duties or other charges. If additional information is needed, please contact Iridium at the address and phone number listed in Paragraph 6 below.

#### **4. General Provisions**

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, THIS WARRANTY COVERS THE PRODUCTS ONLY, AND NO WARRANTY IS MADE AS TO COVERAGE, AVAILABILITY, OR GRADE OF SERVICE PROVIDED BY IRIDIUM SEPARATELY FOR IRIDIUM SATELLITE SERVICES. IN NO EVENT SHALL IRIDIUM BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT IN QUESTION, OR FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

 
#### **5. Conditions of Use and Disclaimer of Liability**

Users of the Iridium Satellite LLC ("Iridium") mobile satellite phone service and related equipment, including without limitation those using the phone service and equipment in any manner in conjunction with emergency 911 or emergency 112 or any other distress calling or emergency services, both public or privately operated, acknowledge and agree as a condition of the provision of phone service and equipment by Iridium that they will make no claim, whether in contract, tort or otherwise, against Iridium for bodily injury, loss of life, damage to property or for any other loss whatsoever, or for special, incidental, indirect, consequential or punitive damages, by reason of any unavailability, delay, faultiness or failures of the Iridium facilities or phone service or equipment or for inaccuracies or failures with regard to any user information provided. This is a waiver and release and disclaimer of liability to the fullest extent permitted by applicable law and applies regardless of the cause of any liability, including without limitations, to wrongful conduct, omission or fault of employees or agents of Iridium.

Iridium makes no warranties, express or implied, including any implied warranty of merchantability or fitness for a particular purpose concerning Iridium service or equipment. Iridium cannot promise uninterrupted or error free service.

The Iridium service does not currently interact with E911 or E112 or other public emergency services. Such calls are not able to be made on the Iridium system.

Users by their use of the phone service and equipment consent to Iridium's disclosure of user information, including but not limited to name, address, telephone number and location information, including the geographic coordinates of equipment, to





governmental and quasi-governmental agencies such as emergency service providers and law enforcement agencies, where Iridium deems it necessary in its sole discretion to respond to an exigent circumstances. These governmental and quasi-governmental agencies shall be deemed "users" for all purposes of this Disclaimer of Liability.

## **6. State Law and Other Jurisdiction Rights; Software Copyrights**

  SOME STATES AND OTHER JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO PURCHASER.

This warranty gives Purchaser specific legal rights, and Purchaser may also have other rights which vary from jurisdiction to jurisdiction.

Laws in the United States and other countries preserve for Iridium certain exclusive rights for copyrighted Product software such as the exclusive rights to reproduce in copies and distribute copies of such Product software. Product software may be copied into, used in and redistributed with only the Product associated with such Product software. No other use, including without limitation disassembly, of such Product software or exercise of exclusive rights in such Product software is permitted.



## **7. Contact**

For additional information about this Product warranty, please contact your Service Provider or Point of Sale.

For additional information about Iridium products and services, please contact Iridium as follows:

By Telephone:           Customer Service Toll Free Number:  
                                  +1-866-947-4348

                                  Local or International Number:  
                                  +1-480-752-5155

By Email:                Info@iridium.com

By Mail:                 Iridium Satellite LLC  
                                  Attn: Customer Service  
                                  8440 S. River Parkway, Tempe, AZ 85284  
                                  USA

